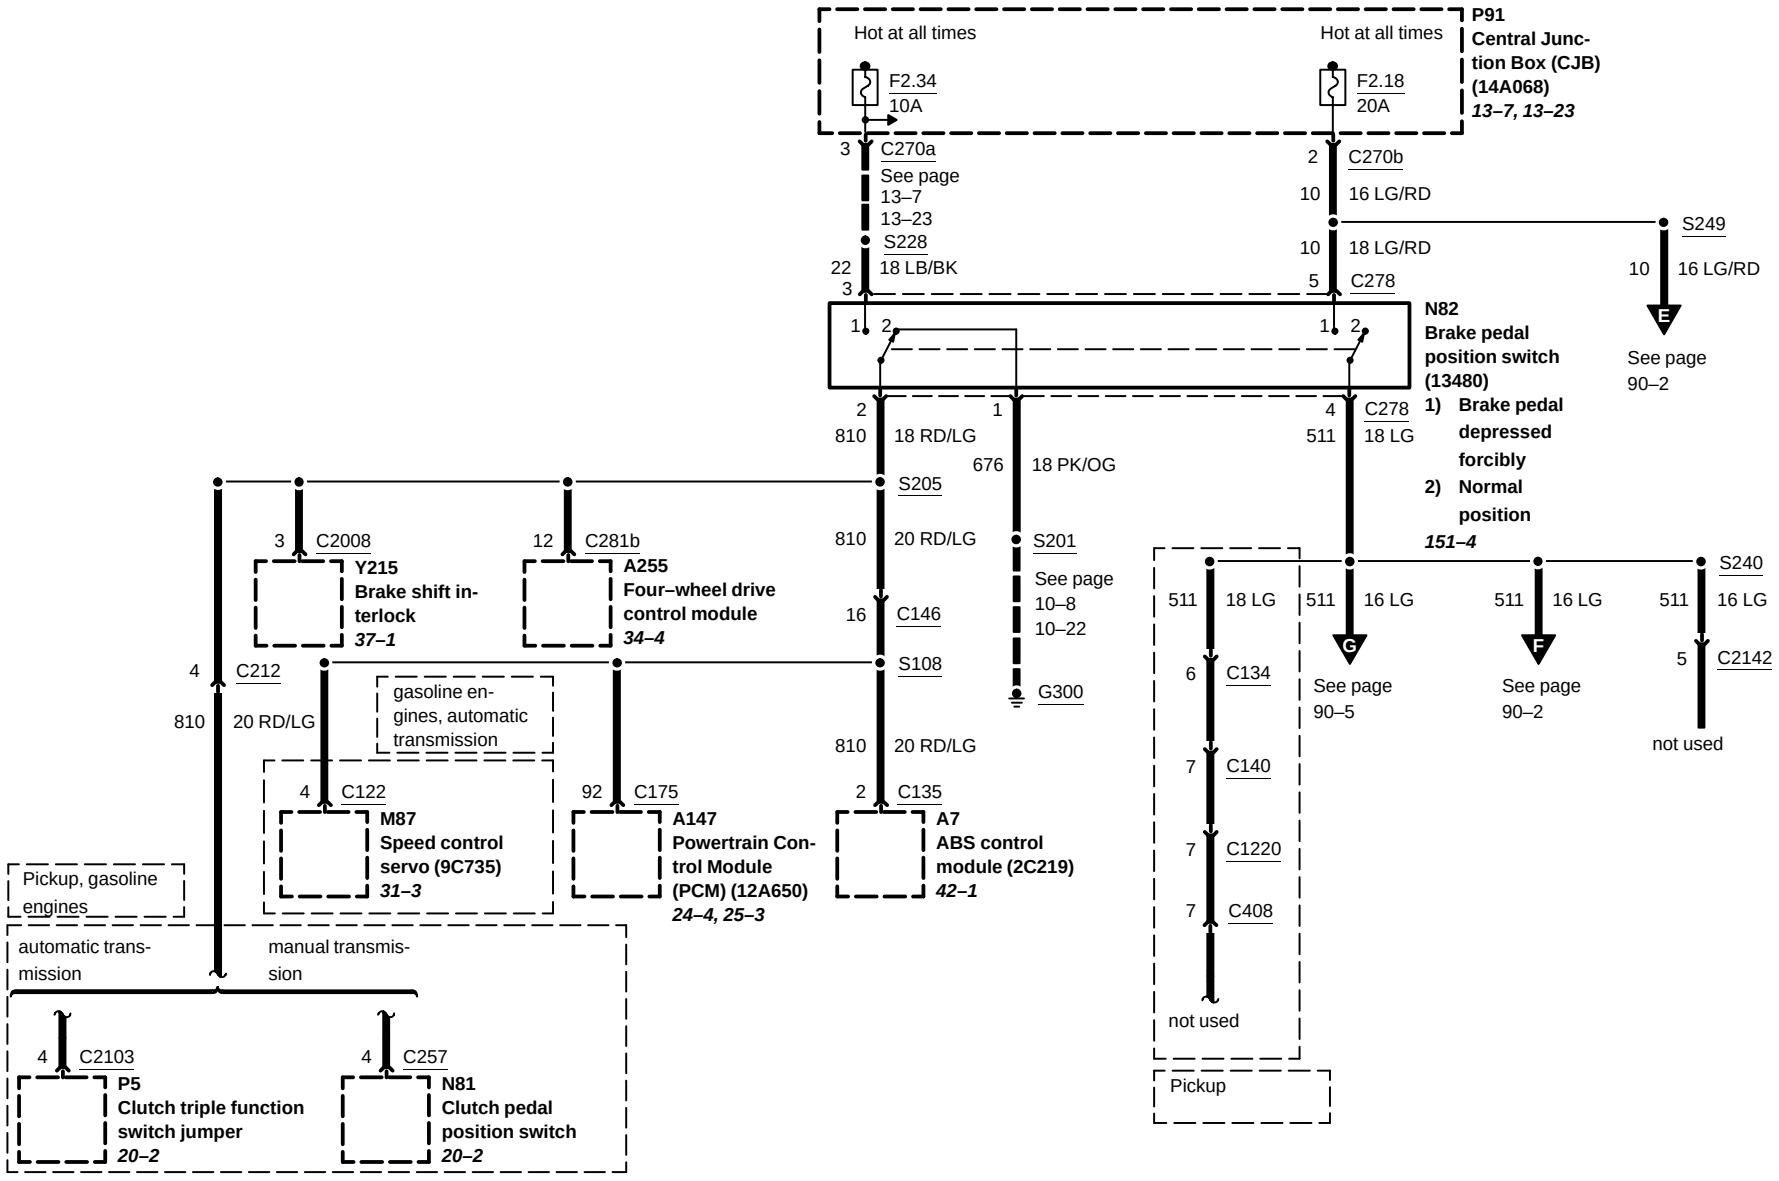
Hot at all times
F2.34
10A
Hot at all times
F2.18
20A
P91
Central Junction Box (CJB)
(14A068)
13–7, 13–23
3 C270a
See page 13–7 13–23
2 C270b
10 16 LG/RD
S228
22 18 LB/BK
3
10 18 LG/RD
5 C278
S249
10 16 LG/RD
See page 90–2
N82
Brake pedal position switch
(13480)
1) Brake pedal depressed forcibly
2) Normal position
151–4
2 810 18 RD/LG
1 676 18 PK/OG
4 C278 511 18 LG
S205
810 20 RD/LG
S201
See page 10–8 10–22
G300
3 C2008
Y215
Brake shift interlock
37–1
12 C281b
A255
Four–wheel drive control module
34–4
16 C146
S108
4 C212
810 20 RD/LG
gasoline engines, automatic transmission
4 C122
M87
Speed control servo (9C735)
31–3
92 C175
A147
Powertrain Control Module (PCM) (12A650)
24–4, 25–3
810 20 RD/LG
2 C135
A7
ABS control module (2C219)
42–1
511 18 LG
511 16 LG
511 16 LG
511 16 LG
S240
6 C134
7 C140
7 C1220
7 C408
not used
See page 90–5
See page 90–2
5 C2142
not used
Pickup
Pickup, gasoline engines
automatic transmission
manual transmission
4 C2103
P5
Clutch triple function switch jumper
20–2
4 C257
N81
Clutch pedal position switch
20–2