C250

14401

N278
Ignition switch

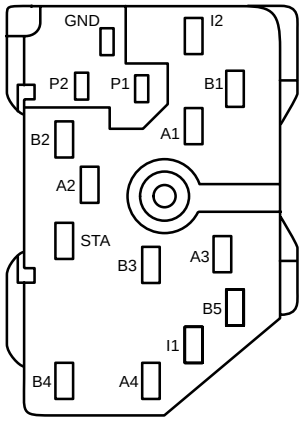

F15009

Pin	Circuit	Circuit Function
I2	–	not used
B1	37 (YE)	Voltage supplied at all times (overload protected)
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
P1	512 (TN/LG)	Brake indicator, control
GND	57 (BK)	Ground
P2	–	not used
B2	37 (YE)	Voltage supplied at all times (overload protected)
A2	276 (BN)	Voltage in Run (overload protected)
STA	32 (RD/LB)	Voltage supplied in Start (overload protected)
B3	–	not used
A3	–	not used
B5	37 (YE)	Voltage supplied at all times (overload protected)
I1	1050 (LG/VT)	Voltage supplied at all times (overload protected)
A4	276 (BN)	Voltage in Run (overload protected)
B4	37 (YE)	Voltage supplied at all times (overload protected)

C251

14401

D20
Data Link Connector
(DLC)

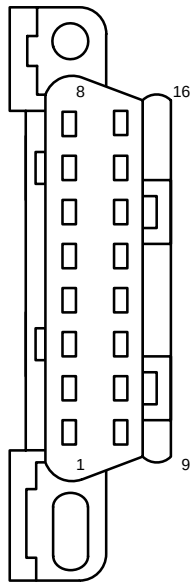

F16063

Pin	Circuit	Circuit Function
1	–	not used
2	914 (TN/OG)	SCP Bus +
3	–	not used
4	57 (BK)	Ground
5	570 (BK/WH)	Ground
6	–	not used
7	70 (LB/WH)	ISO Bus
8	–	not used
9	–	not used
10	915 (PK/LB)	SCP Bus –
11	–	not used
12	–	not used
13	107 (VT)	Module programming signal
14	–	not used
15	–	not used
16	40 (LB/WH)	Voltage supplied at all times (overload protected)