C204

14401

Exterior rear view
mirror switch
(17B676)

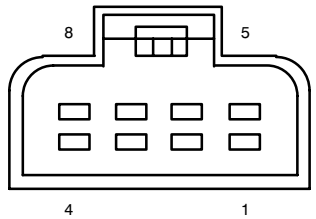

F08177

Pin	Circuit	Circuit function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	33-AD12 (YE)	Switched between: Battery voltage, Ground or Open
4	31-AD12 (BK/YE)	Ground
5	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
6	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
7	–	not used
8	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)

C205

14401

Main light switch
(11654)

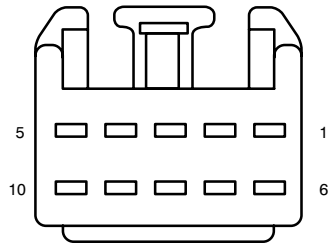

F10063

Pin	Circuit	Circuit function
1	8-LE21 (WH/GN)	Sensor signal
2	–	not used
3	–	not used
4	31-LH26 (BK)	Ground
5	64S-LH26 (BU/BK)	Variable DC voltage (not overload protected), Switched
6	–	not used
7	9-LE29 (BN/GN)	Sensor signal return (reference/ground)
8	8-LE47 (WH/GN)	Signal 2 (Y–direction, reverse, downward)
9	–	not used
10	–	not used