C1318 (BU)

* California

1807463C91

Valve cover assembly, right



Pin	Circuit	Circuit function
A	110 (BN)	glow plug 1, Power
	*110 (BN/BU)	
B	110 (BN)	glow plug 3, Power
	*110 (BN/GN)	
C	555 (TN)	Fuel injector 1, control
D	557 (BN/YE)	Fuel injector 3, control
E	1087 (OG)	Fuel injectors, Power
F	559 (TN/BK)	Fuel injector 5, control
G	561 (TN/RD)	Fuel injector 7, control
H	110 (BN)	glow plug 5, Power
	*110 (BN/WH)	
J	110 (BN)	glow plug 7, Power
	*110 (BN/RD)	

C2015 (BK)

14401/14A200

Parking brake switch (15A851)

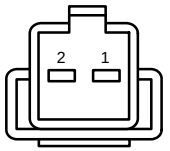

F02067

Pin	Circuit	Circuit function
1	162 (LG/RD)	Parking brake switch (15A851)
2	57 (BK)	Ground

C2028

14A200/14401

In–line fuse

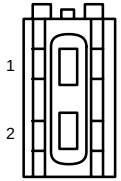

F02213

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C2008 (BK)

14401

Brake shift interlock

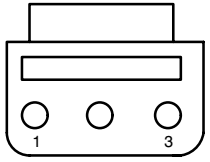

F03080

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	298 (VT/OG)	Voltage in Run (overload protected)

C2031 (TN)

14401

Cigar lighter, front (15055)

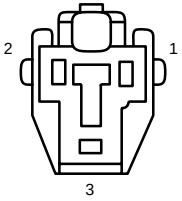

F03163

Pin	Circuit	Circuit function
1	40 (LB/WH)	Cigar lighter, feed
2	–	not used
3	57 (BK)	Ground