C511

14A488

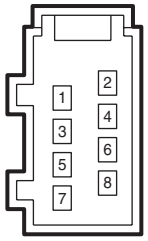

XF2T-14A624-LC (M)

14K138

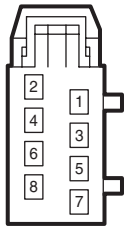

XF2T-14A464-MB (F)

(1) 122 (YE)
(2) 1205 (BK)
(3) 66 (LB)
(4) 78 (LB/YE)
(5) 124 (BN)
(6) -not used-
(7) 123 (RD)
(8) -not used-

C518

14A488

Power window motor, left front

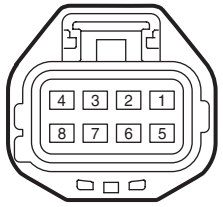

98AG-14A464-EHC (F)

Pin	Circuit	Circuit Function
1	2000 (GY/RD)	Not used (Factory test only)
2	400 (LB/BK)	Accessory delay relay, output
3	992 (WH/BK)	Master window switch, up
4	991 (TN/LB)	Master window switch, down
5	875 (BK/LB)	Logic ground
6	2018 (OG/YE)	Window, One Touch Up (O.T.U.) / One Touch Down (O.T.D.) Auto command, left front
7	1001 (WH/YE)	Fused battery feed
8	57 (BK)	Motor ground

C522

14A488

Exterior rear view mirror, left

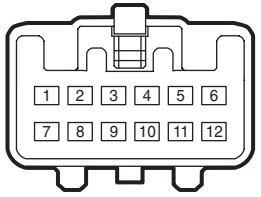

97BG-14A459-YMB (M)

Pin	Circuit	Circuit Function
1	1486 (YE/LB)	LH memory mirror left/right motor - up
2	1487 (DB)	LH memory mirror left/right motor - down
3	1484 (YE/RD)	LH memory mirror left/right motor - left
4	1485 (RD)	LH memory mirror left/right motor - right
5	951 (DB/WH)	LH mirror up/down position sensor
6	891 (RD/BK)	Memory mirror module position +
7	949 (RD/WH)	LH mirror left/right position sensor
8	894 (GY)	Memory mirror module position -
9	59 (DG/VT)	Heated exterior mirror feed
10	3 (LG/WH)	LH front turn signal lamp
11	55 (BK/PK)	Cargo lamp switch to cargo lamp
12	1205 (BK)	General ground (type 4 ground)

C523

14A488

Speaker, left front

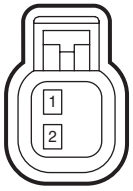

XR3T-14A464-BA (F)

Pin	Circuit	Circuit Function
1	804 (OG/LG)	Speaker voice coil feed-front (left channel)
2	813 (LB/WH)	Speaker switch ground to left front speaker