C1184 (BK)

12B637

Fuel injector 4
(9F593)



F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1185 (BK)

12B637

Fuel injector 5
(9F593)



F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186 (BK)

12B637

Fuel injector 6
(9F593)



F02058

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1189 (BK)

12B637

Throttle Position
Sensor (TPS)
(9B989)

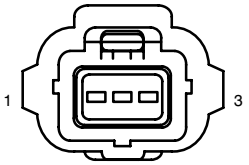

F03093

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
3	351 (BN/WH)	Reference, voltage

C1194 (WH)

14290

Trailer tow relay

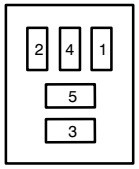

F05064

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	962 (BN/WH)	Trailer tow relay, switched output
4	–	not used
5	1043 (DG/YE)	Trailer tow relay - fused feed

C2008 (BK)

14401

Brake shift interlock

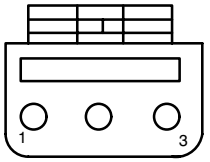

F03080

Pin	Circuit	Circuit function
1	810 (RD/LG)	Brake pedal position switch (13480), input
2	57 (BK)	Ground
3	1003 (GY/YE)	Voltage in Run (overload protected)