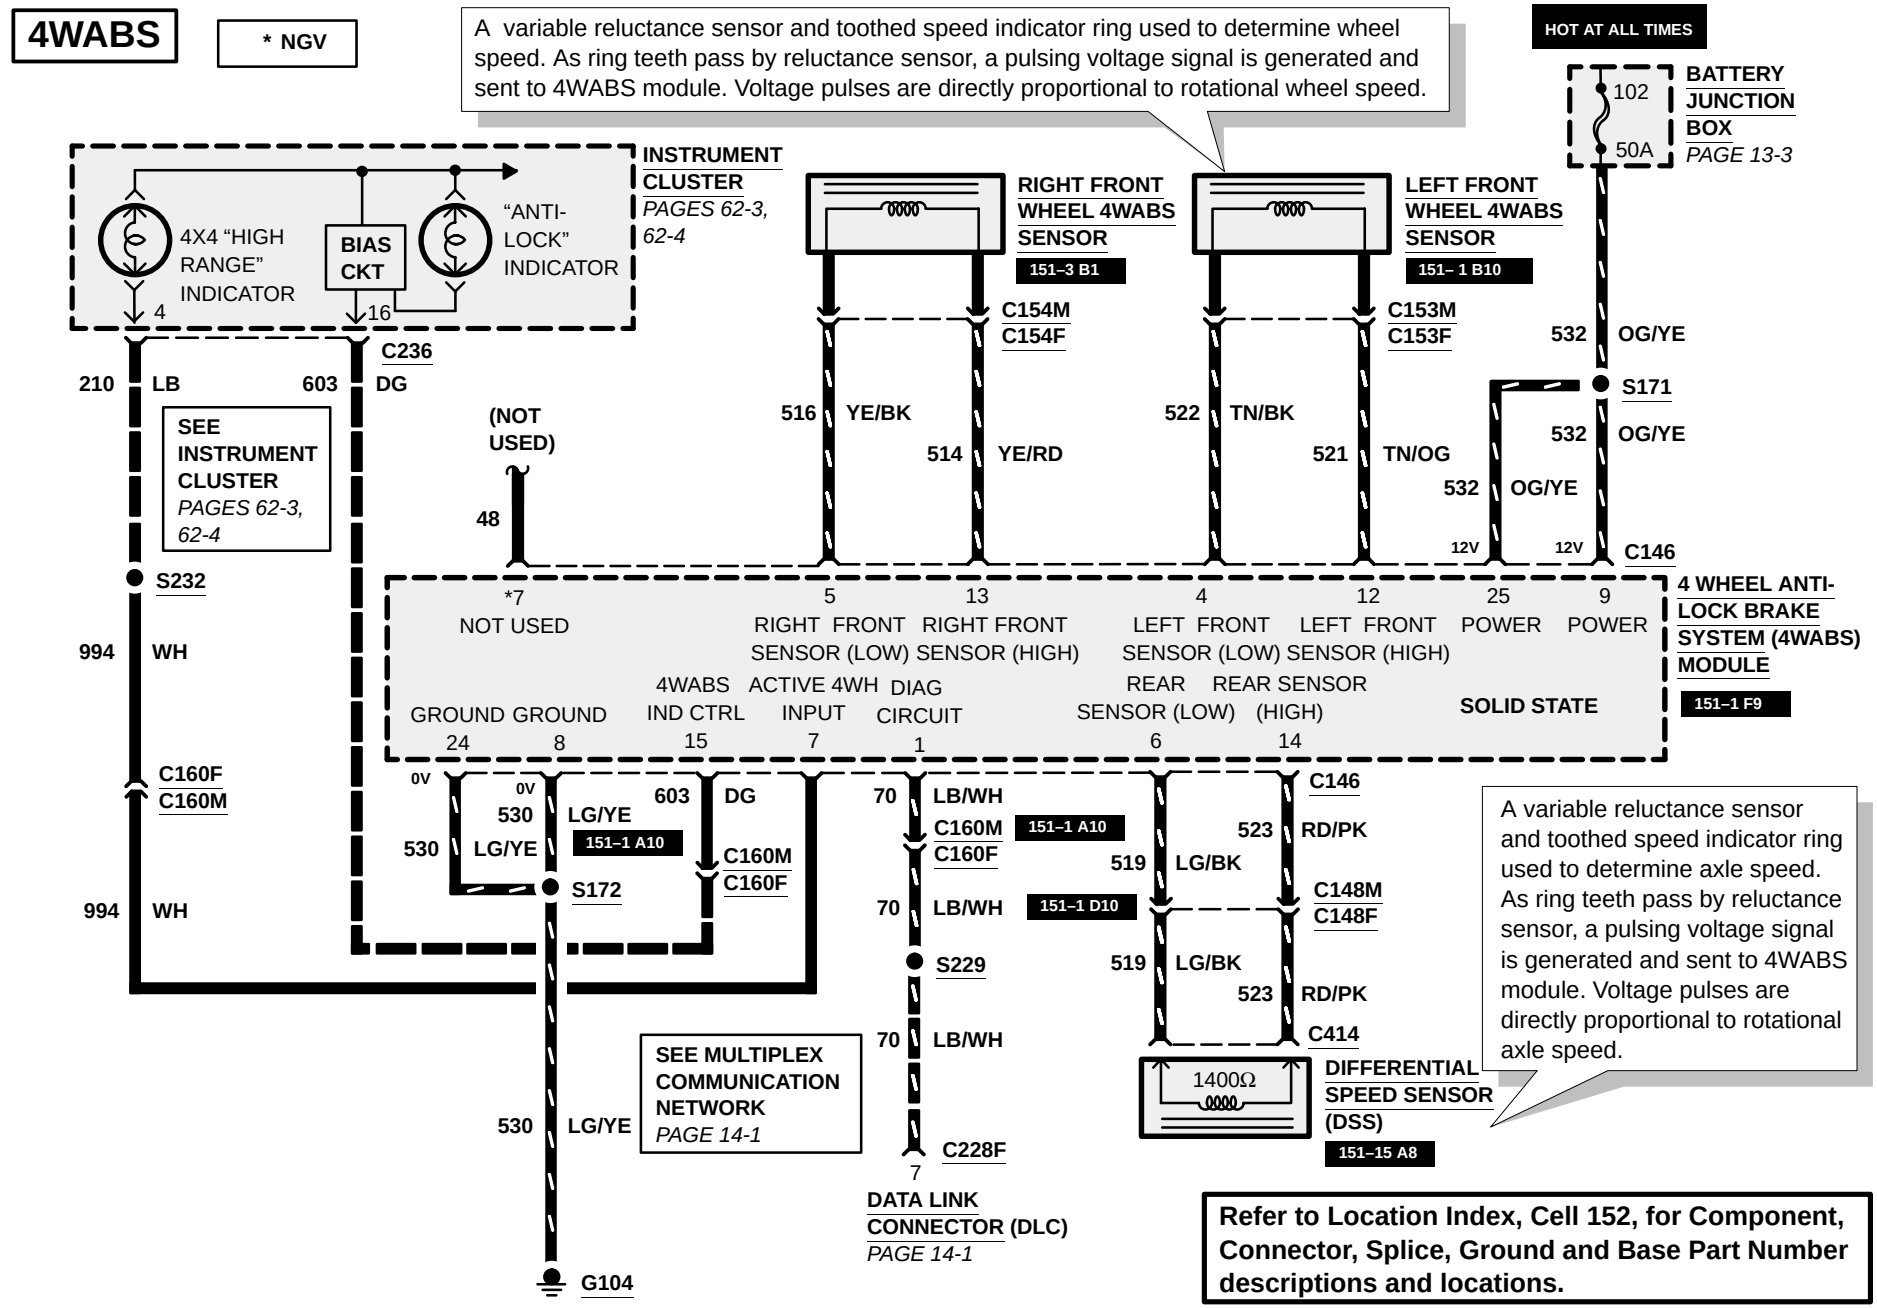
4WABS
* NGV
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
102
50A
INSTRUMENT CLUSTER
PAGES 62-3, 62-4
4X4 "HIGH RANGE" INDICATOR
BIAS CKT
"ANTI-LOCK" INDICATOR
4
16
RIGHT FRONT WHEEL 4WABS SENSOR
151–3 B1
LEFT FRONT WHEEL 4WABS SENSOR
151– 1 B10
C154M
C154F
C153M
C153F
C236
210 LB
603 DG
532 OG/YE
S171
(NOT USED)
48
516 YE/BK
514 YE/RD
522 TN/BK
521 TN/OG
532 OG/YE
532 OG/YE
12V
12V
C146
SEE INSTRUMENT CLUSTER
PAGES 62-3, 62-4
S232
994 WH
*7 NOT USED
5 RIGHT FRONT SENSOR (LOW)
13 RIGHT FRONT SENSOR (HIGH)
4 LEFT FRONT SENSOR (LOW)
12 LEFT FRONT SENSOR (HIGH)
25 POWER
9 POWER
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
151–1 F9
SOLID STATE
GROUND 24
GROUND 8
4WABS IND CTRL 15
ACTIVE 4WH INPUT 7
DIAG CIRCUIT 1
REAR SENSOR (LOW) 6
REAR SENSOR (HIGH) 14
C160F
C160M
0V
0V
530 LG/YE
603 DG
530 LG/YE
151–1 A10
C160M
C160F
S172
994 WH
70 LB/WH
C160M
C160F
151–1 A10
C146
523 RD/PK
519 LG/BK
C148M
C148F
151–1 D10
70 LB/WH
S229
519 LG/BK
523 RD/PK
C414
70 LB/WH
1400Ω
DIFFERENTIAL SPEED SENSOR (DSS)
151–15 A8
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational axle speed.
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
530 LG/YE
7
C228F
DATA LINK CONNECTOR (DLC)
PAGE 14-1
G104
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.