C2003b (YE)

14B023

A29
Air bag diagnostic monitor

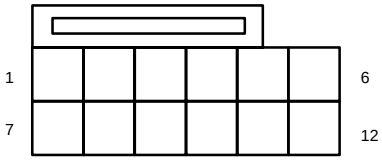

F12121

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	PS07 (YE/GN)	Seat belt tensioner, passenger seat
11	–	not used
12	PS08 (YE/RD)	Seat belt tensioner, passenger seat

C2005 (WH)

14A644

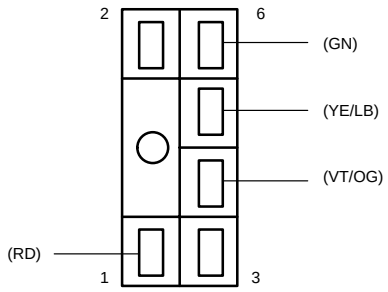

F06155

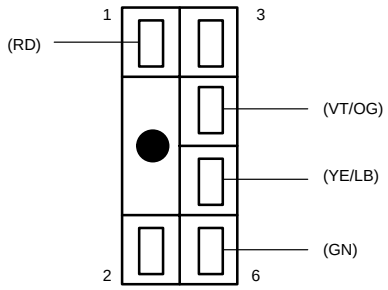

F06183

C2003c (YE)

14B023

A29
Air bag diagnostic monitor

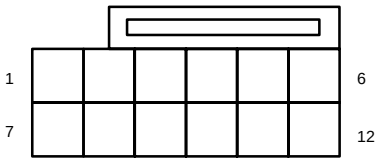

F12121

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	PS10 (YE/BK)	Seat belt tensioner, driver seat
8	–	not used
9	PS09 (YE)	Seat belt tensioner, driver seat
10	–	not used
11	–	not used
12	–	not used

C2007 (BN)

N437
Speed control actuator switch, steering wheel

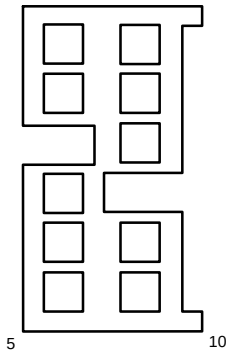

F10057

Pin	Circuit	Circuit Function
1	(YE/LB)	Speed control switch, input
2	(VT/OG)	Speed control switch, input
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used