C233

14B242

B206
In–vehicle temperature sensor
(19C734)



F03072

Pin	Circuit	Circuit Function
1	790 (WH/OG)	In–vehicle temperature sensor (19C734), input
2	–	not used
3	470 (PK/BK)	Sensor signal return (reference/ground)

C237

14A005

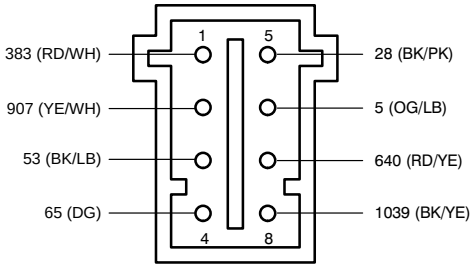

F08051

14401

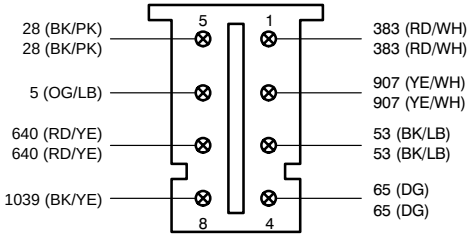

F08058

C243

14A318 five–passenger model
14B079 six–passenger model

A144
CD changer
(18D806)

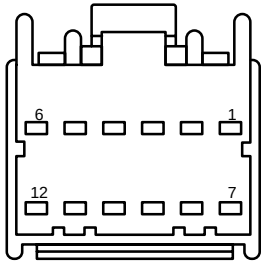

F12103

Pin	Circuit	Circuit Function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left, +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	1110 (LG/PK)	Voltage supplied at all times (overload protected)
10	48	CD changer audio drain
11	798 (LG/RD)	to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –