## C270d

### 14401

P91
Central Junction
Box (CJB) (14A068)

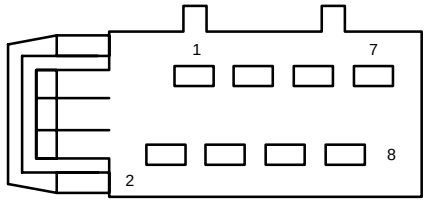


F08112

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1542 (RD) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 1567 (RD/LB) | Voltage supplied at all times (overload protected), to, Adjustable pedal switch |
| 4 | 364 (BK/LG) | Voltage supplied at all times (overload protected), to, Auxiliary A/C relay |
| 5 | 797 (LG/VT) | Voltage supplied at all times (overload protected) |
| 6 | – | not used |
| 7 | 40 (LB/WH) | Cigar lighter, feed |
| 8 | 59 (DG/VT) | fused feed, to, Rear window defrost switch (18578) |

## C270e

### 14401

P91
Central Junction Box (CJB)
(14A068)

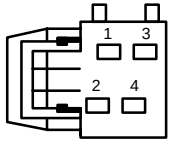


F04140

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 50 (RD) | Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572) |
| 2 | 1049 (BN/PK) | Voltage supplied at all times (overload protected) |
| 3 | 116 (RD/BK) | Voltage supplied at all times (overload protected), to, Vehicle Security Module (VSM) |
| 4 | 325 (DB/OG) | Starter relay (11450), control |