C2193b

A2–521

N453
Indicator light switch



F01145

Pin	Circuit	Circuit function
1	G052 (DG)	Indicator light switch, feed
	G052 (DG)	Indicator light switch, feed

C2193c

A2–521

N453
Indicator light switch



F01145

Pin	Circuit	Circuit function
1	G050 (OG)	Indicator light switch, return

C2193d

A2–521

N453
Indicator light switch



F01145

Pin	Circuit	Circuit function
1	G046 (YE)	Indicator light switch, return

C2224

14401

A38
Central Timer Module (CTM)

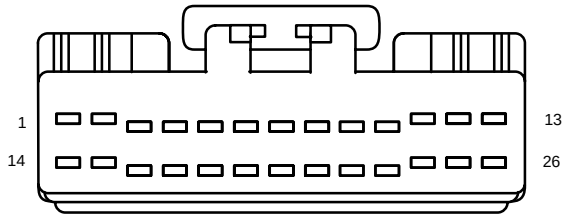

F26015

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	345 (BK/PK)	Door ajar switch, right front, signal
8	344 (BK/YE)	Door ajar switch, left front, signal
9	433 (DG/OG)	Door ajar indicator, control
10	158 (BK/PK)	Key warning switch (11A127), input
11	257 (WH/RD)	Hot in Park or Head
12	450 (DG/LG)	Safety belt indicator, control
13	680 (LB/OG)	Wiper/washer, delay input
14	875 (BK/LB)	Ground
15	671 (LB)	Wiper run/park relay, switched output
16	784 (LB/BK)	not used
17	–	not used
18	647 (GY/LB)	Wiper high/low relay, control
19	646 (YE/WH)	Wiper run/park relay, control
20	1083 (LB/BK)	Air bag, tone driver
21	682 (DB)	signal, return
22	684 (PK/YE)	Wiper/washer, input
23	85 (BN/LB)	Safety belt buckle switch (10B924), input
24	686 (TN/RD)	Windshield washer relay, control
25	70 (LB/WH)	ISO Bus
26	875 (BK/LB)	Ground