C400

14A344

P75
Auxiliary Junction Box (AJB), trailer tow

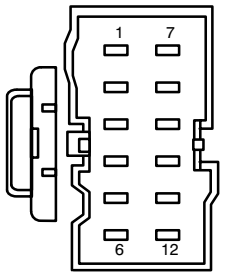

F12091

Pin	Circuit	Circuit Function
1	–	not used
2	30S-DC1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
3	–	not used
4	–	not used
5	30S-DC4 (RD/GN)	Voltage supplied at all times (not overload protected), Switched
6	–	not used
7	–	not used
8	30S-ND16 (RD/BU)	Voltage supplied at all times (not overload protected), Switched
9	–	not used
10	–	not used
11	30S-ND16 (RD/BU)	Voltage supplied at all times (not overload protected), Switched
12	–	not used

C402a

18C619

R19
Rear window defrost grid (18C618)


F01029

Pin	Circuit	Circuit Function
1	31-HB19 (BK/BU)	Ground

C402b

18C619

R19
Rear window defrost grid (18C618)


F01029

Pin	Circuit	Circuit Function
1	75-HB19 (YE/RD)	Voltage: Ignition switch in Accessory or Run