F106

-5

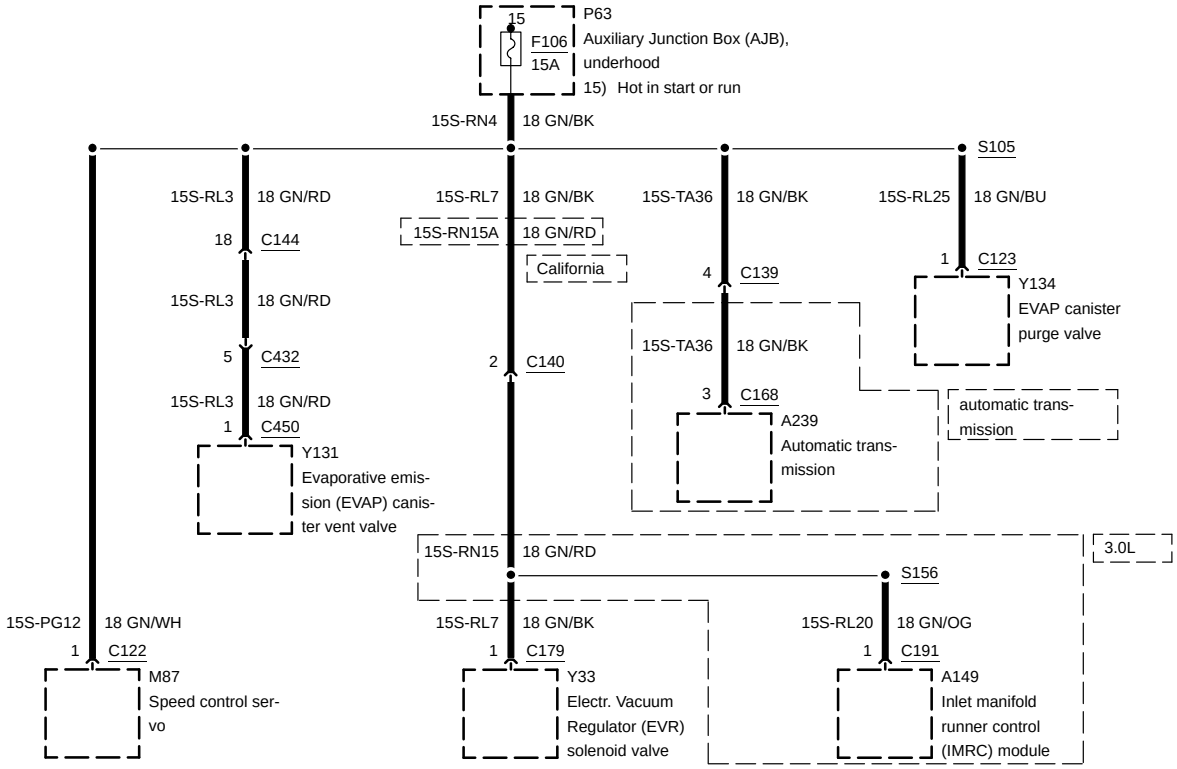
15
P63
F106
15A
Auxiliary Junction Box (AJB), underhood
15) Hot in start or run
15S-RN4 18 GN/BK
S105
15S-RL3 18 GN/RD
15S-RL7 18 GN/BK
15S-TA36 18 GN/BK
15S-RL25 18 GN/BU
18 C144
15S-RN15A 18 GN/RD
California
4 C139
1 C123
Y134
EVAP canister purge valve
15S-RL3 18 GN/RD
15S-TA36 18 GN/BK
5 C432
2 C140
3 C168
automatic transmission
15S-RL3 18 GN/RD
1 C450
A239
Automatic transmission
Y131
Evaporative emission (EVAP) canister vent valve
3.0L
15S-RN15 18 GN/RD
S156
15S-PG12 18 GN/WH
15S-RL7 18 GN/BK
15S-RL20 18 GN/OG
1 C122
1 C179
1 C191
M87
Speed control servo
Y33
Electr. Vacuum Regulator (EVR) solenoid valve
A149
Inlet manifold runner control (IMRC) module