C4032

13A409
14A488

E243
Park/stop/turn lamp,
right rear

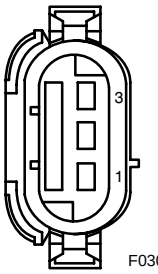

F03099

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	5 (OG/LB)	Turn lamps, feed, right rear

C4033 (GY)

14405

A31
Fuel tank unit

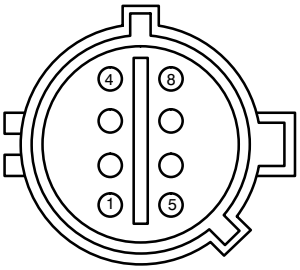

F08048

Pin	Circuit	Circuit Function
1	351 (BN/WH)	Reference, voltage
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	787 (PK/BK)	Fuel pump, Power
4	570 (BK/WH)	Ground
5	791 (RD/PK)	Fuel tank pressure transducer sensor
6	359 (GY/RD)	signal, return
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel pump/fuel gauge sender

C4035

13A409
14A488

E242
Park/stop/turn lamp,
left rear

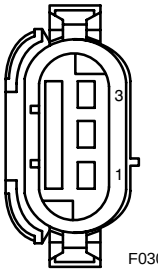

F03099

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	9 (LG/OG)	Turn lamps, feed, left rear