C353 (BN)

14A005

Power seat motor assembly, left

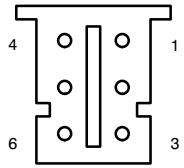

F06257

Pin	Circuit	Circuit function
1	980 (YE/WH)	Fwd/Rwd motor, Forward
2	983 (RD/LG)	Rear height motor, Down
3	982 (YE/LG)	Rear height motor, Up
4	981 (RD/WH)	Fwd/Rwd motor, Rearward
5	978 (YE/LB)	Front height motor, Up
6	979 (RD/LB)	Front height motor, Down

C359

14A699

Heated seat module, driver side front

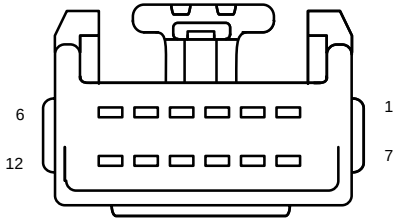

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	298 (VT/OG)	Voltage in Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1065 (WH/LB)	heater, return
8	1020 (DG/VT)	Climate controlled seat module – High
9	1018 (LG/OG)	indicator, Low –
10	1019 (TN/LB)	indicator, High –
11	1255 (WH/RD)	Climate controlled seat module – Low
12	1048 (LB/WH)	Voltage supplied at all times (overload protected)

C358 (BK)

14A699

Seat track position sensor, left

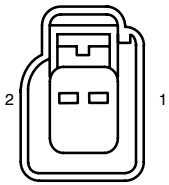

F02132

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat track position sensor, left, return
2	1520 (LG)	Seat track position sensor, left, feed