Component Testing – Seat adjust switch

Schematic

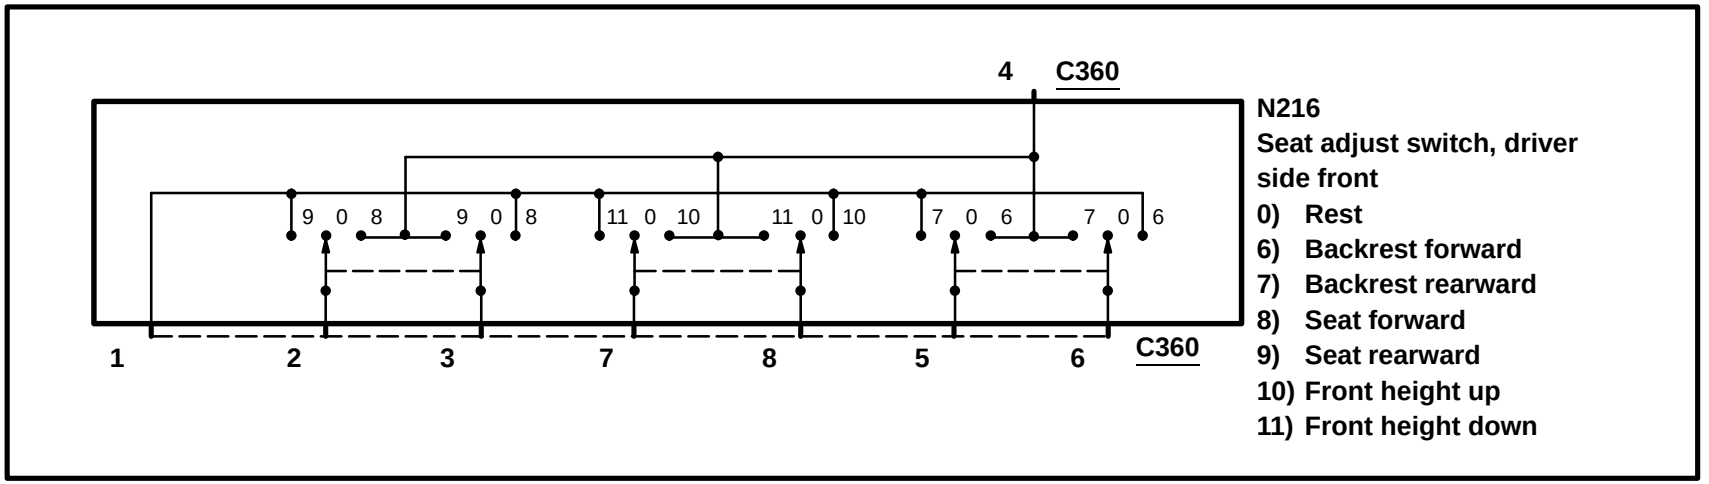

N216
Seat adjust switch, driver side front

0) Rest
6) Backrest forward
7) Backrest rearward
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down

Terminals

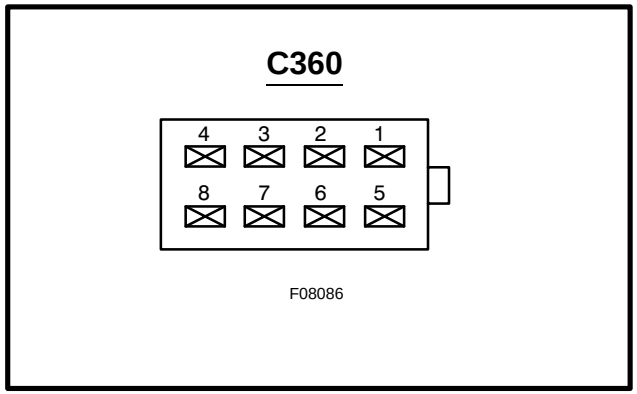

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Backrest circuit	4 and 5	Forward	Closed circuit
	5 and 1	rearward	Closed circuit
	1 and 6	Forward	Closed circuit
	6 and 4	rearward	Closed circuit
Height circuit	7 and 4	Up	Closed circuit
	7 and 1	Down	Closed circuit
	8 and 1	Up	Closed circuit
	8 and 4	Down	Closed circuit
Forward/rearward circuit	4 and 2	Forward	Closed circuit
	2 and 1	rearward	Closed circuit
	3 and 4	Forward	Closed circuit
	3 and 1	rearward	Closed circuit