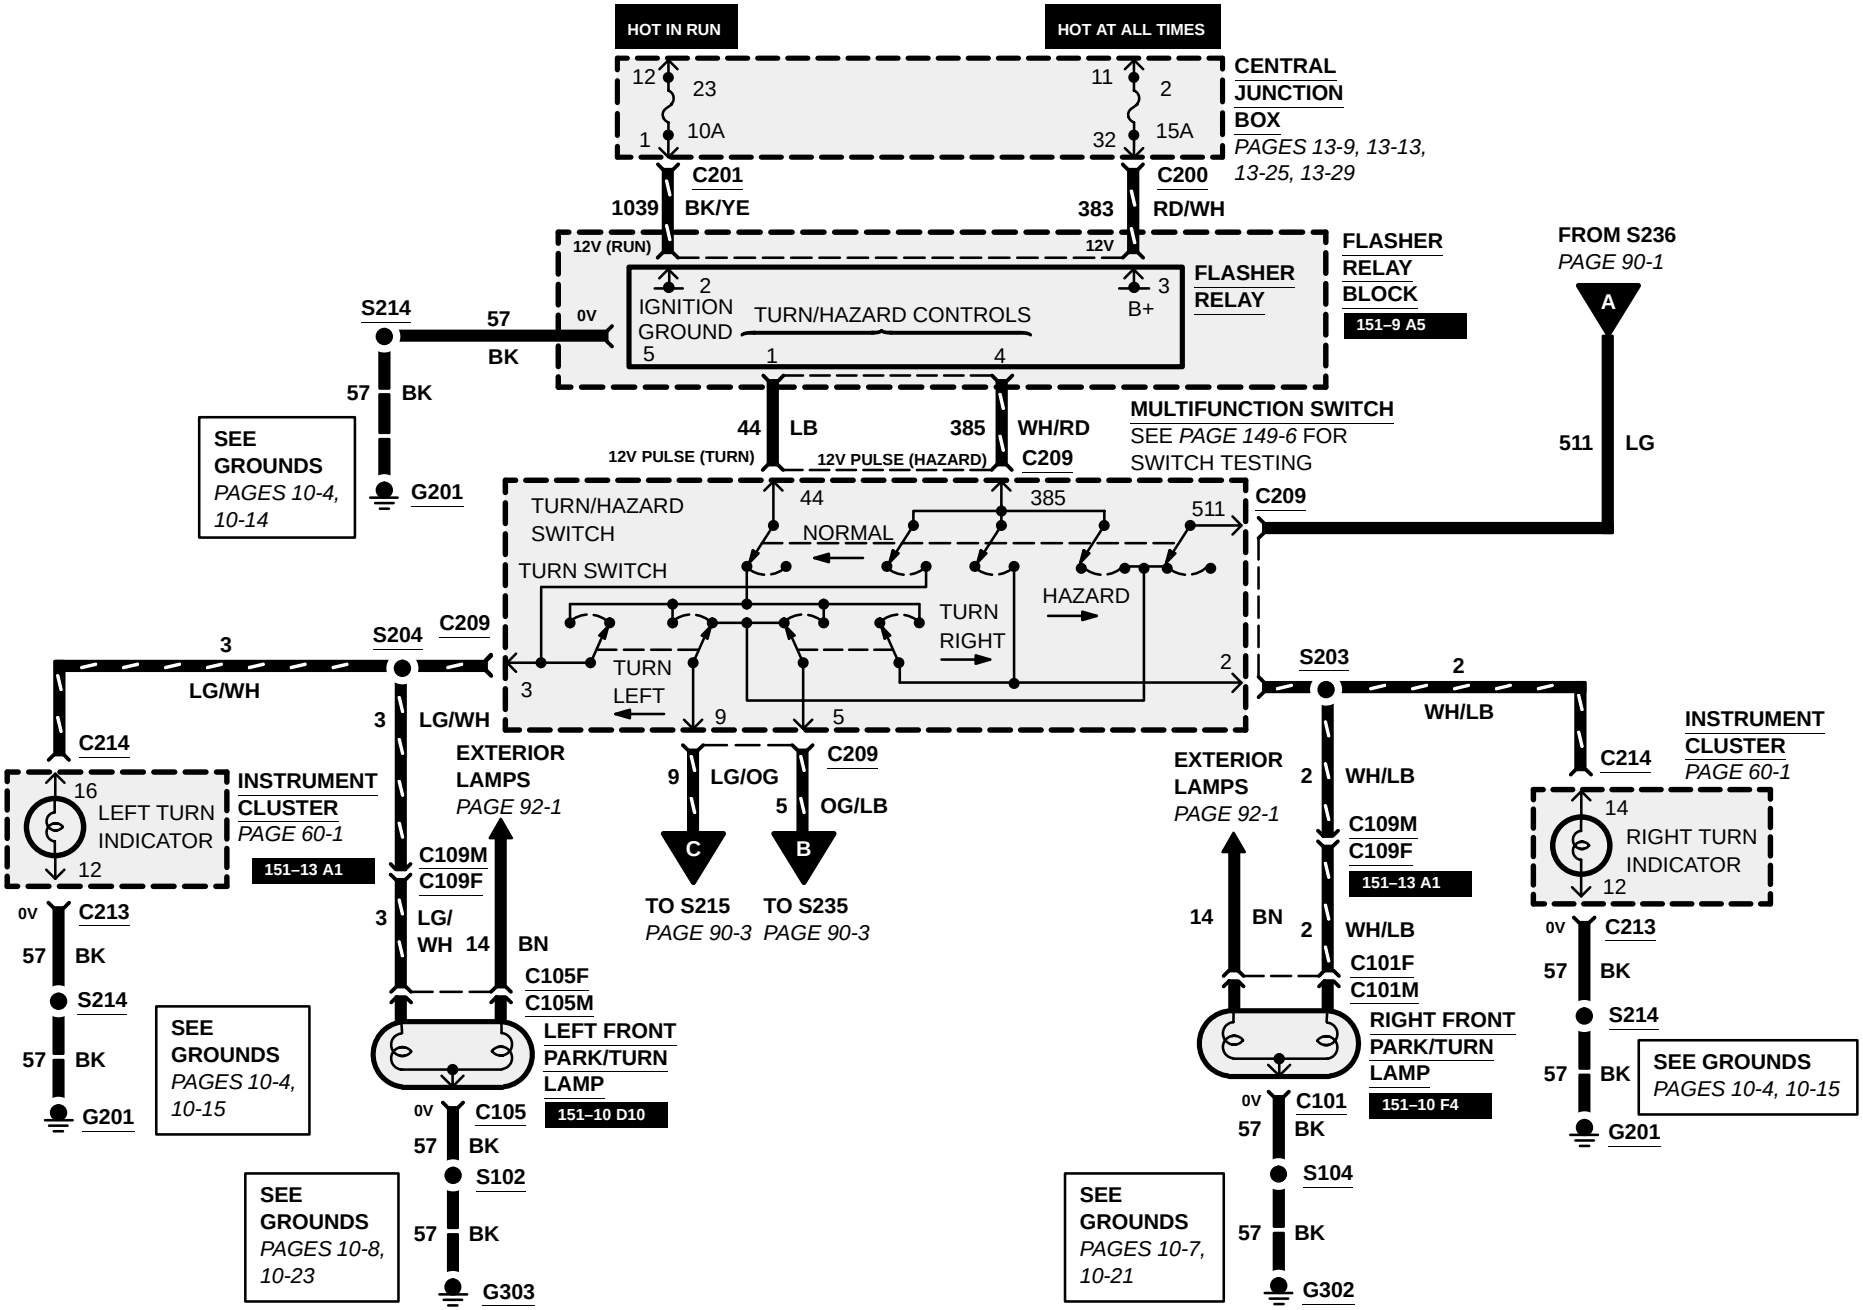
HOT IN RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-9, 13-13, 13-25, 13-29
12
23
1
10A
11
2
32
15A
C201
1039 BK/YE
C200
383 RD/WH
12V (RUN)
12V
FLASHER RELAY BLOCK
151–9 A5
FLASHER RELAY
IGNITION GROUND
TURN/HAZARD CONTROLS
B+
FROM S236
PAGE 90-1
A
S214
57 BK
0V
57 BK
G201
SEE GROUNDS
PAGES 10-4, 10-14
44 LB
12V PULSE (TURN)
385 WH/RD
12V PULSE (HAZARD)
C209
MULTIFUNCTION SWITCH
SEE PAGE 149-6 FOR SWITCH TESTING
511 LG
TURN/HAZARD SWITCH
NORMAL
TURN SWITCH
HAZARD
TURN RIGHT
TURN LEFT
S204
C209
3 LG/WH
S203
2 WH/LB
C214
INSTRUMENT CLUSTER
PAGE 60-1
16
LEFT TURN INDICATOR
12
151–13 A1
EXTERIOR LAMPS
PAGE 92-1
9 LG/OG
5 OG/LB
C
B
TO S215
PAGE 90-3
TO S235
PAGE 90-3
C109M
C109F
3 LG/WH
14 BN
C105F
C105M
LEFT FRONT PARK/TURN LAMP
151–10 D10
14 BN
2 WH/LB
C101F
C101M
RIGHT FRONT PARK/TURN LAMP
151–10 F4
14
RIGHT TURN INDICATOR
C213
S214
S102
S104
G303
G302
SEE GROUNDS
PAGES 10-8, 10-23
SEE GROUNDS
PAGES 10-7, 10-21
SEE GROUNDS
PAGES 10-15
SEE GROUNDS
PAGES 10-4, 10-15