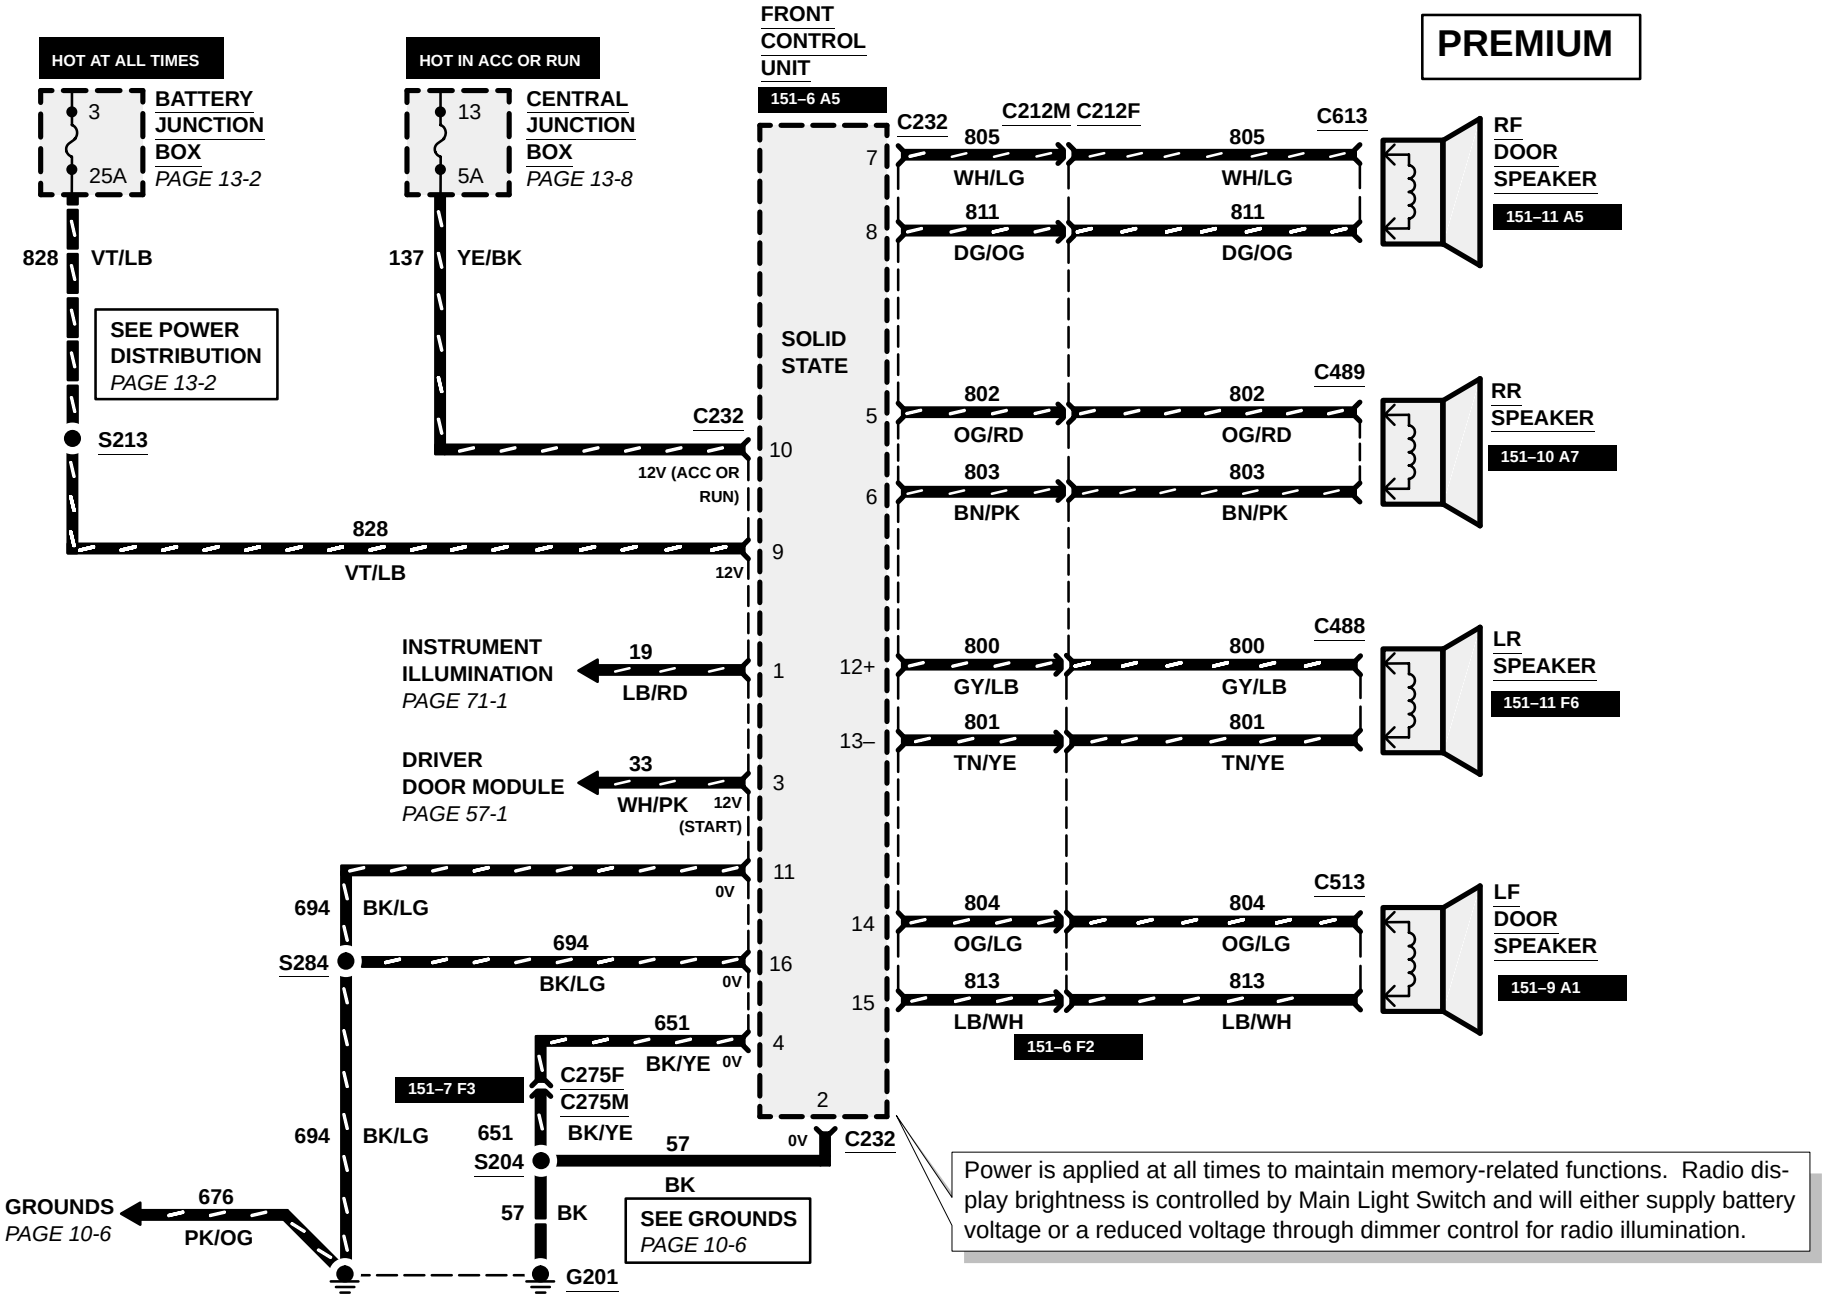
PREMIUM
HOT AT ALL TIMES
HOT IN ACC OR RUN
FRONT CONTROL UNIT
151–6 A5
BATTERY JUNCTION BOX
PAGE 13-2
CENTRAL JUNCTION BOX
PAGE 13-8
3
25A
13
5A
828 VT/LB
137 YE/BK
SEE POWER DISTRIBUTION
PAGE 13-2
S213
C232
12V (ACC OR RUN)
828 VT/LB
12V
SOLID STATE
INSTRUMENT ILLUMINATION
PAGE 71-1
19 LB/RD
DRIVER DOOR MODULE
PAGE 57-1
33 WH/PK
12V (START)
694 BK/LG
0V
S284
651 BK/YE
151–7 F3
C275F
C275M
694 BK/LG
651 BK/YE
S204
57 BK
0V
GROUNDS
PAGE 10-6
676 PK/OG
SEE GROUNDS
PAGE 10-6
G201
C232
C212M C212F
C613
RF DOOR SPEAKER
151–11 A5
805 WH/LG
811 DG/OG
C489
RR SPEAKER
151–10 A7
802 OG/RD
803 BN/PK
C488
LR SPEAKER
151–11 F6
800 GY/LB
801 TN/YE
C513
LF DOOR SPEAKER
151–9 A1
804 OG/LG
813 LB/WH
151–6 F2
7
8
5
6
10
9
1
3
11
16
4
2
12+
13–
14
15
Power is applied at all times to maintain memory-related functions. Radio display brightness is controlled by Main Light Switch and will either supply battery voltage or a reduced voltage through dimmer control for radio illumination.