C184 (GY)

12B637

Fuel injector 4
(9F593)



F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C185 (GY)

12B637

Fuel injector 5
(9F593)



F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C186 (GY)

12B637

Fuel injector 6
(9F593)



F02058

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C187 (GY)

12B637

Fuel injector 7
(9F593)



F02058

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C188 (GY)

12B637

Fuel injector 8
(9F593)



F02058

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C193 (BK)

7C078

Output Shaft Speed
(OSS) sensor
(7H103)

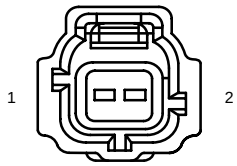

F02101

Pin	Circuit	Circuit function
1	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103), signal
2	359 (GY/RD)	signal, return