C359 (GY)

14A699

Heated seat module, driver side front

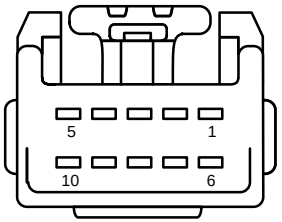

F10091

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	1020 (DG/VT)	On/Off signal
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, driver side, heater, return
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
8	1205 (BK)	Ground
9	–	not used
10	461 (OG)	indicator, control

* without memory

C360 (BK)

14A699

Seat adjust switch, driver side front (14A701)

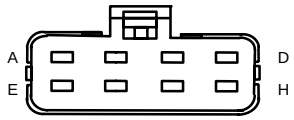

F08265

Pin	Circuit	Circuit function
A	1463 (RD/YE)	Power seat switch, Left, to Driver seat module (14C718)
A	*979 (RD/LB)	Fwd/Rwd motor, Forward
B	1467 (GY/YE)	Power seat switch, Left, to Driver seat module (14C718)
B	*982 (YE/LG)	Rear height motor, Down
C	1468 (GY/LB)	Power seat switch, Left, to Driver seat module (14C718)
C	*983 (RD/LG)	Rear height motor, Up
D	1464 (YE)	Power seat switch, Left, to Driver seat module (14C718)
D	*990 (YE/LB)	Front height motor, Down
E	1205 (BK)	Ground
E	*1205 (BK)	Ground
F	1466 (GY/OG)	Power seat switch, Left, to Driver seat module (14C718)
F	*981 (RD/WH)	Fwd/Rwd motor, Forward
G	1465 (GY/WH)	Power seat switch, Left, to Driver seat module (14C718)
G	*980 (YE/WH)	Fwd/Rwd motor Rearward
H	956 (OG/LG)	Voltage supplied at all times (overload protected)
H	*566 (DG)	Voltage supplied at all times (overload protected)