C270a

14A488

P91
Central Junction
Box (CJB)
(14A068)

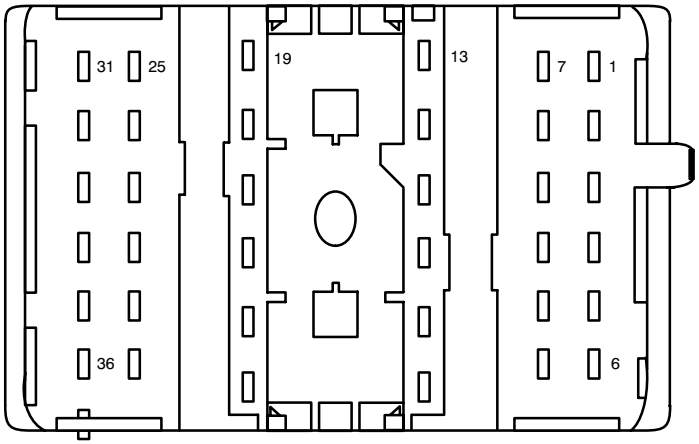

F36003

Pin	Circuit	Circuit function
1	566 (DG)	Voltage supplied at all times (overload protected)
	490 (RD)	Voltage supplied at all times (overload protected)
2	1002 (BK/PK)	Accessory relay, switched power, output
3	1087 (OG)	Voltage supplied in Start and Run (overload protected)
4	186 (BN/LB)	Rear window defrost relay, switched power
5	1002 (BK/PK)	Voltage supplied in Start and Run (overload protected)
	–	not used
6	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
7	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
8	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
9	1003 (GY/YE)	Voltage supplied at all times (overload protected)
10	956 (OG/LG)	Voltage supplied at all times (overload protected)
11	705 (LG/OG)	Battery saver relay, switched power
12	705 (LG/OG)	Battery saver relay, switched power
13	53 (BK/LB)	Interior lamp relay, switched power, output
	–	not used
14	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
15	53 (BK/LB)	Interior lamp relay, switched power, output
	–	not used
16	400 (LB/BK)	Accessory relay, switched power, output
17	1205 (BK)	Ground
	–	not used
18	1000 (RD/BK)	Voltage supplied in Start (overload protected)
	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
19	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
20	400 (LB/BK)	Accessory relay, switched power, output
	–	not used
21	–	not used
22	–	not used
23	170 (RD/LB)	Voltage supplied at all times (overload protected)
24	175 (BK/YE)	Voltage supplied at all times (overload protected)
25	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
26	–	not used
27	956 (OG/LG)	Voltage supplied at all times (overload protected)
	566 (DG)	Voltage supplied at all times (overload protected)
28	1 (DB)	Horn relay, switched power, output
29	1205 (BK)	Ground
30	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
31	406 (BN/WH)	Voltage supplied in Start and Run (overload protected)
	–	not used
32	1002 (BK/PK)	Accessory relay, switched power, output
33	59 (DG/VT)	Voltage supplied in Start and Run (overload protected)
34	1205 (BK)	Ground
35	–	not used
36	1 (DB)	Horn relay, switched power, output