C183

9D930

Y11
Fuel injector 3



F02058

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184

9D930

Y12
Fuel injector 4



F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C185

9D930

Y21
Fuel injector 5



F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

9D930

Y22
Fuel injector 6



F02058

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C189

12B637

B8
Throttle Position
Sensor (TPS)
(9B989)

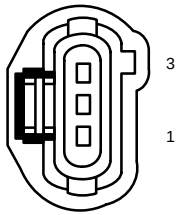

F03118

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
3	351 (BN/WH)	Reference, voltage