C328

14335

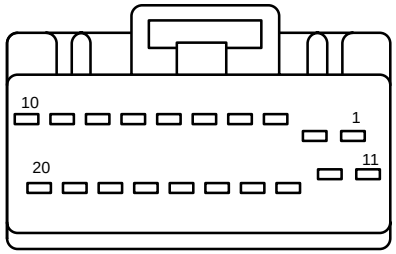

F20017

14B079

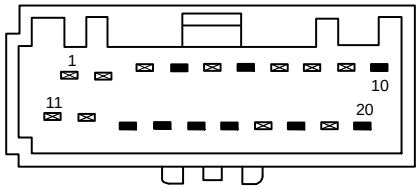

F20047

(1) 797 (LG/VT)
(2) 1002 (BK/PK)
(3) 1068 (LG/BK)
(4) 832 (LB/PK)
(5) 833 (TN)
(6) –
(7) –
(8) 827 (TN/WH)
(9) 800 (GY/LB)
(10) 801 (TN/YE)
(11) 694 (BK/LG)
(12) –
(13) 19 (LB/RD)
(14) 57 (BK)
(15) –
(16) –
(17) –
(18) 825 (TN/LG)
(19) 802 (OG/RD)
(20) 803 (BN/PK)

C329

14B084

A223
Heated seat module, passenger side front

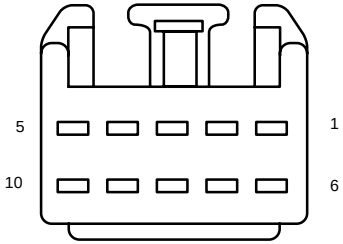

F10063

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Sensor, return
2	1020 (DG/VT)	Seat cushion heater, passenger side, Sensor, signal
3	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, passenger side, heater, return
6	294 (WH/LB)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
8	57 (BK)	Ground
9	–	not used
10	461 (OG)	Illumination, control

C334

N30
Seat cushion heater, right front

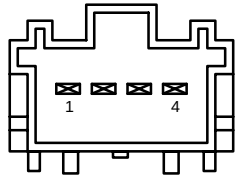

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1066 (GY/LB)	Seat back heater, passenger side, feed