C3202

14K691

A460
Safety belt buckle pretensioner, passenger

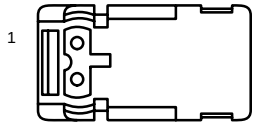

F02215

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Passenger safety belt retractor pretensioner, feed
2	1080 (LG/BK)	Passenger safety belt retractor pretensioner, return

C3209

14A488

B412
Side impact sensor, driver 1



F02383

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag, – driver side impact, – crash sensor to module, – return
2	1261 (WH/LG)	Air bag, – driver side impact, – crash sensor to module, – feed

C3210

14A488

B413
Side impact sensor, driver 2



F02221

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag, – driver side impact, – crash sensor to module, – return
2	1261 (WH/LG)	Air bag, – driver side impact, – crash sensor to module, – feed

C3211

14A488

B414
Side impact sensor, passenger 1



F02383

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag, – passenger side impact, – crash sensor to module, – return
2	1263 (WH)	Air bag, – passenger side impact, – crash sensor to module, – feed

C3212

14A488

B415
Side impact sensor, passenger 2



F02221

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag, – driver side impact, – crash sensor to module, – return
2	1263 (WH)	Air bag, – driver side impact, – crash sensor to module, – feed