C2026b (BK)

14N104

A11
Radio

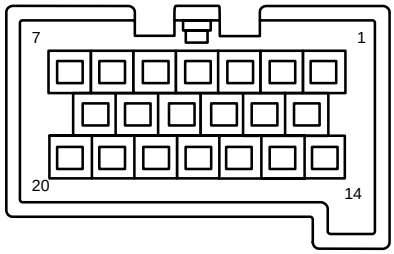

F20021

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	RB64 (YE/RD)	Radio to CD changer
	RB04 (YE/RD)	Radio to CD changer
6	RB63 (LG)	Radio to CD changer
	RB36 (LG)	Radio to CD changer
7	RB62 (VT)	Radio to CD changer
	RB35 (VT)	Radio to CD changer
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	RB06 (WH/BK)	Steering wheel radio switch +
15	RB07 (WH/RD)	Steering wheel radio switch –
16	RB95	Shield
	RC95	Shield
17	RB27 (RD)	Radio to CD changer
	RC27 (RD)	Audio unit – Right –
18	RB25 (GN)	Radio to CD changer
	RC25 (GN)	Audio unit – Right +
19	RB19 (BK)	Radio, to CD changer
	RC19 (BK)	Audio unit – Left +
20	RB20 (WH)	Radio, to CD changer
	RC20 (WH)	Audio unit – Left –

C2026c (BK)

14N104

A11
Radio

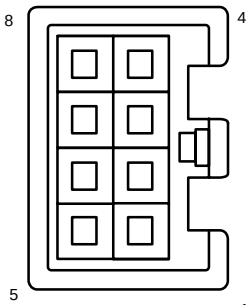

F08151

Pin	Circuit	Circuit Function
1	RB53 (BU)	Radio, to Subwoofer
2	RB52 (WH)	Radio, to Subwoofer
3	RB98	Shield
4	RB55 (OG)	Radio, to Subwoofer
5	–	not used
6	–	not used
7	–	not used
8	–	not used