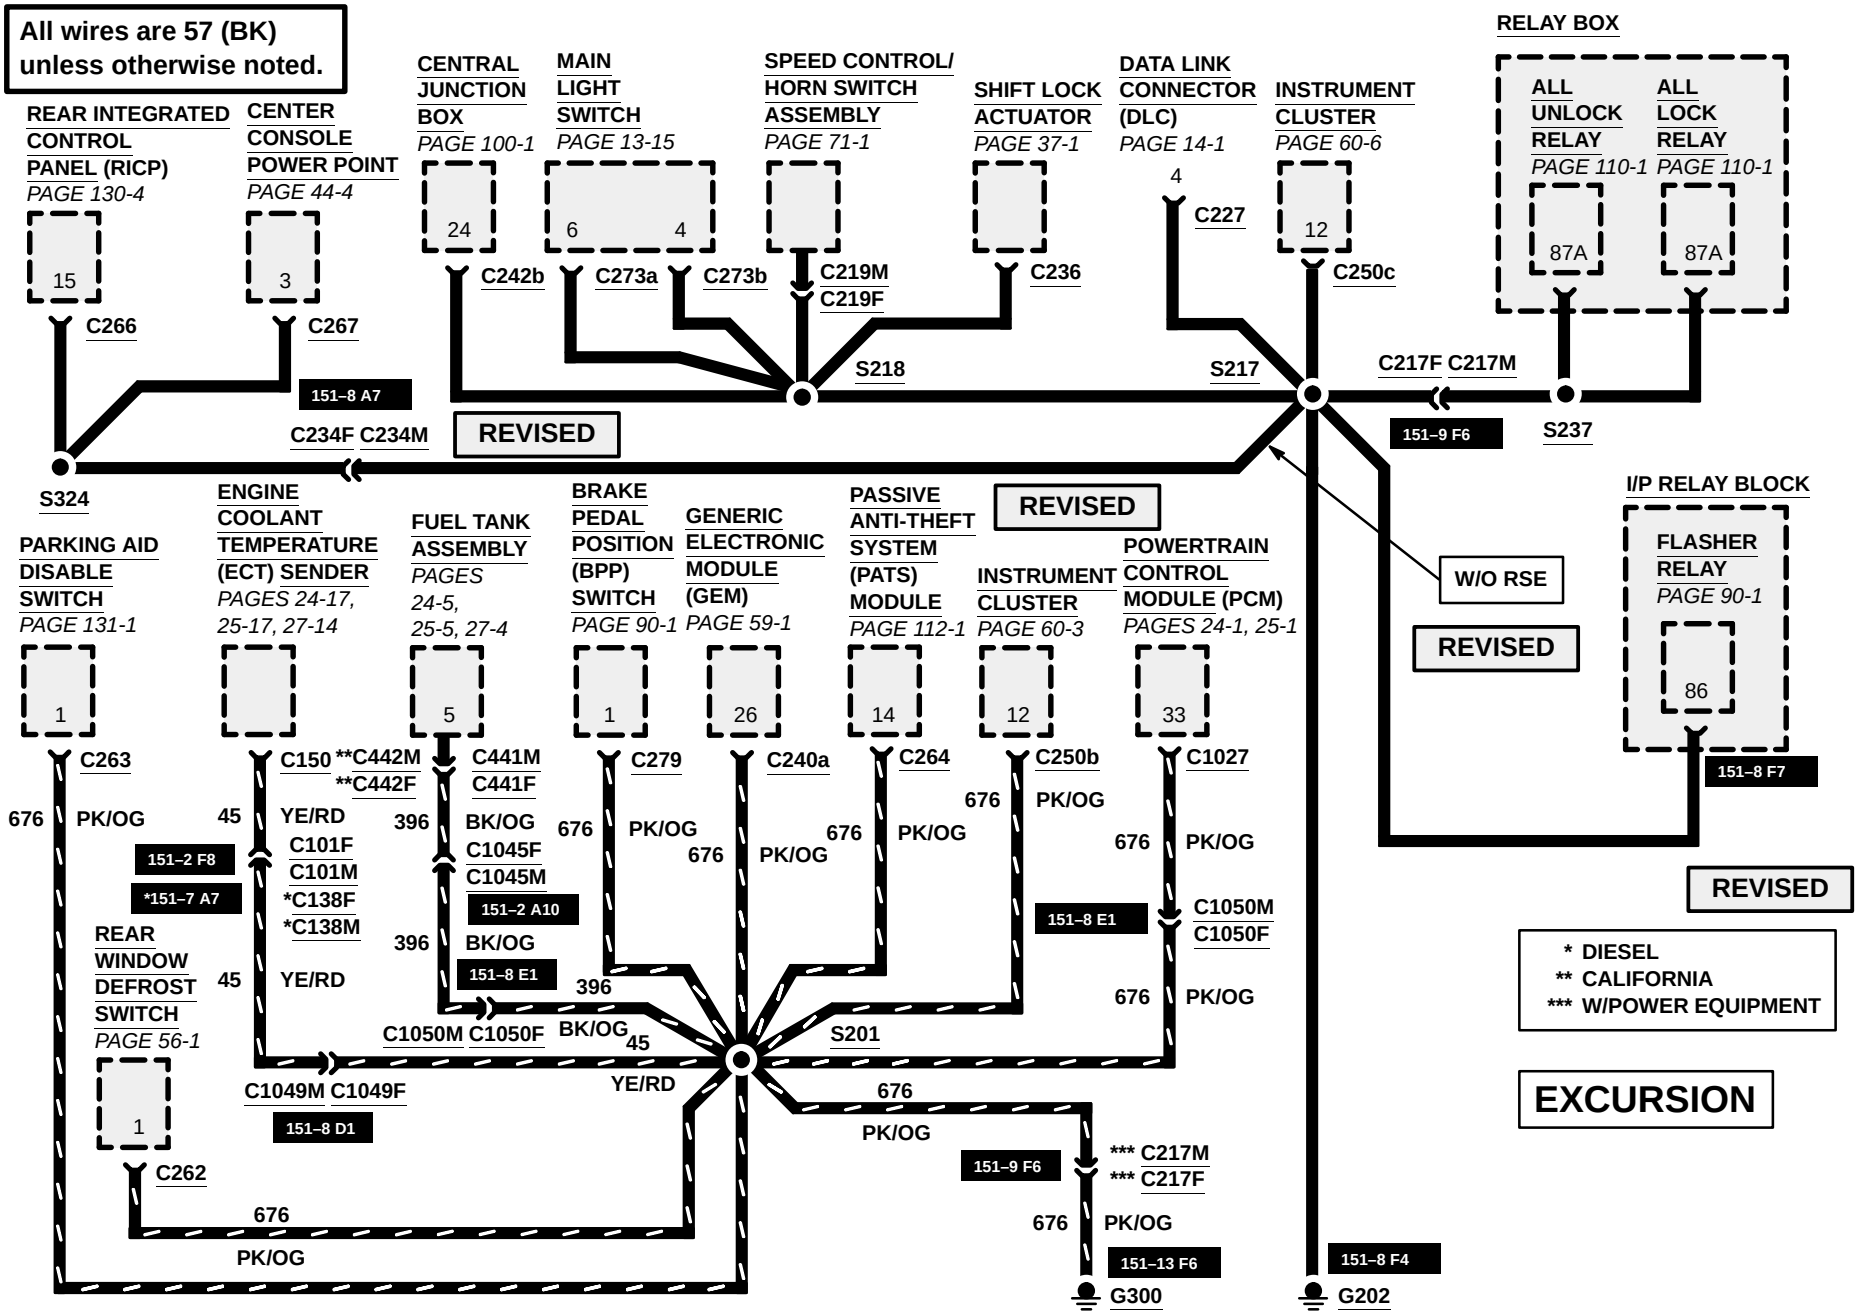
All wires are 57 (BK) unless otherwise noted.
REAR INTEGRATED CONTROL PANEL (RICP)
PAGE 130-4
CENTER CONSOLE POWER POINT
PAGE 44-4
CENTRAL JUNCTION BOX
PAGE 100-1
MAIN LIGHT SWITCH
PAGE 13-15
SPEED CONTROL/ HORN SWITCH ASSEMBLY
PAGE 71-1
SHIFT LOCK ACTUATOR
PAGE 37-1
DATA LINK CONNECTOR (DLC)
PAGE 14-1
INSTRUMENT CLUSTER
PAGE 60-6
RELAY BOX
ALL UNLOCK RELAY
PAGE 110-1
ALL LOCK RELAY
PAGE 110-1
15
3
24
6
4
4
12
87A
87A
C266
C267
C242b
C273a
C273b
C219M
C219F
C236
C227
C250c
151–8 A7
S218
S217
C217F C217M
151–9 F6
S237
C234F C234M
REVISED
S324
REVISED
I/P RELAY BLOCK
FLASHER RELAY
PAGE 90-1
86
151–8 F7
PARKING AID DISABLE SWITCH
PAGE 131-1
ENGINE COOLANT TEMPERATURE (ECT) SENDER
PAGES 24-17, 25-17, 27-14
FUEL TANK ASSEMBLY
PAGES 24-5, 25-5, 27-4
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-1
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
PASSIVE ANTI-THEFT SYSTEM (PATS) MODULE
PAGE 112-1
INSTRUMENT CLUSTER
PAGE 60-3
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-1, 25-1
W/O RSE
REVISED
1
5
1
26
14
12
33
C263
C150
**C442M
**C442F
C441M
C441F
C279
C240a
C264
C250b
C1027
676 PK/OG
45 YE/RD
396 BK/OG
676 PK/OG
676 PK/OG
676 PK/OG
676 PK/OG
C101F
C101M
*C138F
*C138M
C1045F
C1045M
151–2 F8
*151–7 A7
151–2 A10
151–8 E1
151–8 E1
C1050M
C1050F
REAR WINDOW DEFROST SWITCH
PAGE 56-1
45 YE/RD
396 BK/OG
396
676 PK/OG
C1050M C1050F BK/OG 45
S201
1
C1049M C1049F
151–8 D1
YE/RD
676 PK/OG
C262
676
PK/OG
151–9 F6
*** C217M
*** C217F
676 PK/OG
151–13 F6
151–8 F4
G300
G202
REVISED
* DIESEL
** CALIFORNIA
*** W/POWER EQUIPMENT
EXCURSION