Excursion

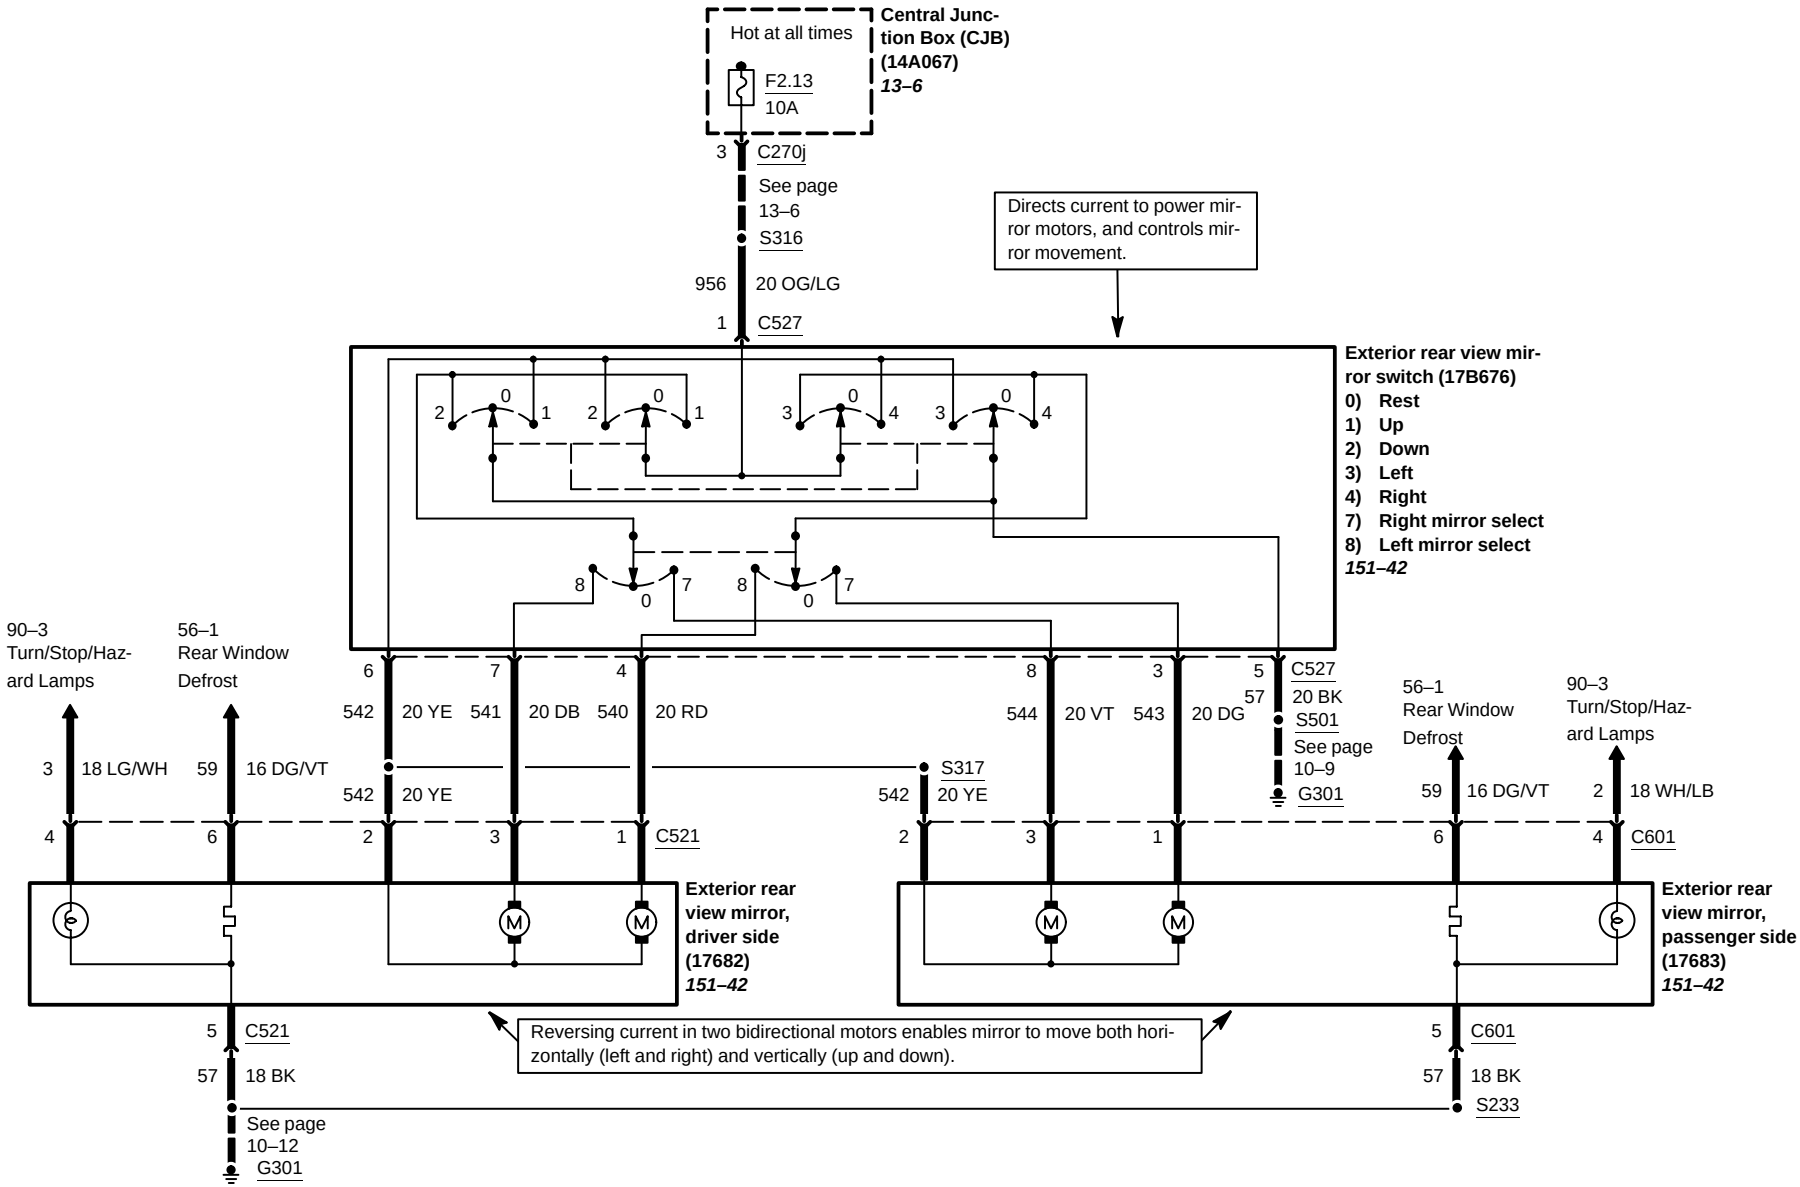
Hot at all times
Central Junction Box (CJB) (14A067) 13–6
F2.13
10A
3 C270j
See page 13–6
S316
956 20 OG/LG
1 C527
Directs current to power mirror motors, and controls mirror movement.
Exterior rear view mirror switch (17B676)
0) Rest
1) Up
2) Down
3) Left
4) Right
7) Right mirror select
8) Left mirror select
151–42
90–3 Turn/Stop/Hazard Lamps
56–1 Rear Window Defrost
6 542 20 YE
7 541 20 DB
4 540 20 RD
8 544 20 VT
3 543 20 DG
5 57 C527 20 BK
S501
See page 10–9
G301
3 18 LG/WH
59 16 DG/VT
542 20 YE
S317
542 20 YE
59 16 DG/VT
2 18 WH/LB
4 6 2 3 1 C521
2 3 1 6 4 C601
Exterior rear view mirror, driver side (17682) 151–42
Exterior rear view mirror, passenger side (17683) 151–42
Reversing current in two bidirectional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
5 C521
57 18 BK
See page 10–12
G301
5 C601
57 18 BK
S233