C112 (BK)

12B637

Coil On Plug (COP) 2 (12A366)

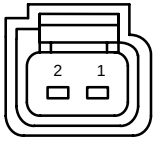

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1026 (PK/WH)	coil driver (CD) – D control
2	***1026 (PK/WH)	coil driver (CD) – D control
	††1118 (RD)	PCM power relay, output

C113 (BK)

12B637

Coil On Plug (COP) 3 (12A366)

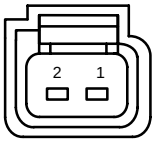

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1028 (WH/PK)	coil driver (CD) – B control
2	***1028 (WH/PK)	coil driver (CD) – B control
	††1118 (RD)	PCM power relay, output

C114 (BK)

12B637

Coil On Plug (COP) 4 (12A366)

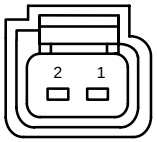

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1030 (DG/VT)	coil driver (CD) – G control
2	***1030 (DG/VT)	coil driver (CD) – G control
	††1118 (RD)	PCM power relay, output

C115 (BK)

12B637

Coil On Plug (COP) 5 (12A366)

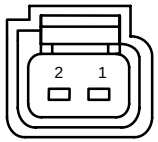

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1021 (LG/YE)	coil driver (CD) – F control
2	***1021 (LG/YE)	coil driver (CD) – F control
	††1118 (RD)	PCM power relay, output

C116 (BK)

12B637

Coil On Plug (COP) 6 (12A366)

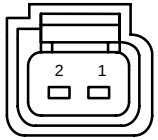

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1025 (OG/YE)	coil driver (CD) – E control
2	***1025 (OG/YE)	coil driver (CD) – E control
	††1118 (RD)	PCM power relay, output

C117 (BK)

12B637

Coil On Plug (COP) 7 (12A366)

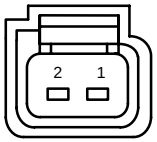

F02645

*** 4.6L 2V
†† 4.6L 4V

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1027 (PK/LB)	coil driver (CD) – C control
2	***1027 (PK/LB)	coil driver (CD) – C control
	††1118 (RD)	PCM power relay, output