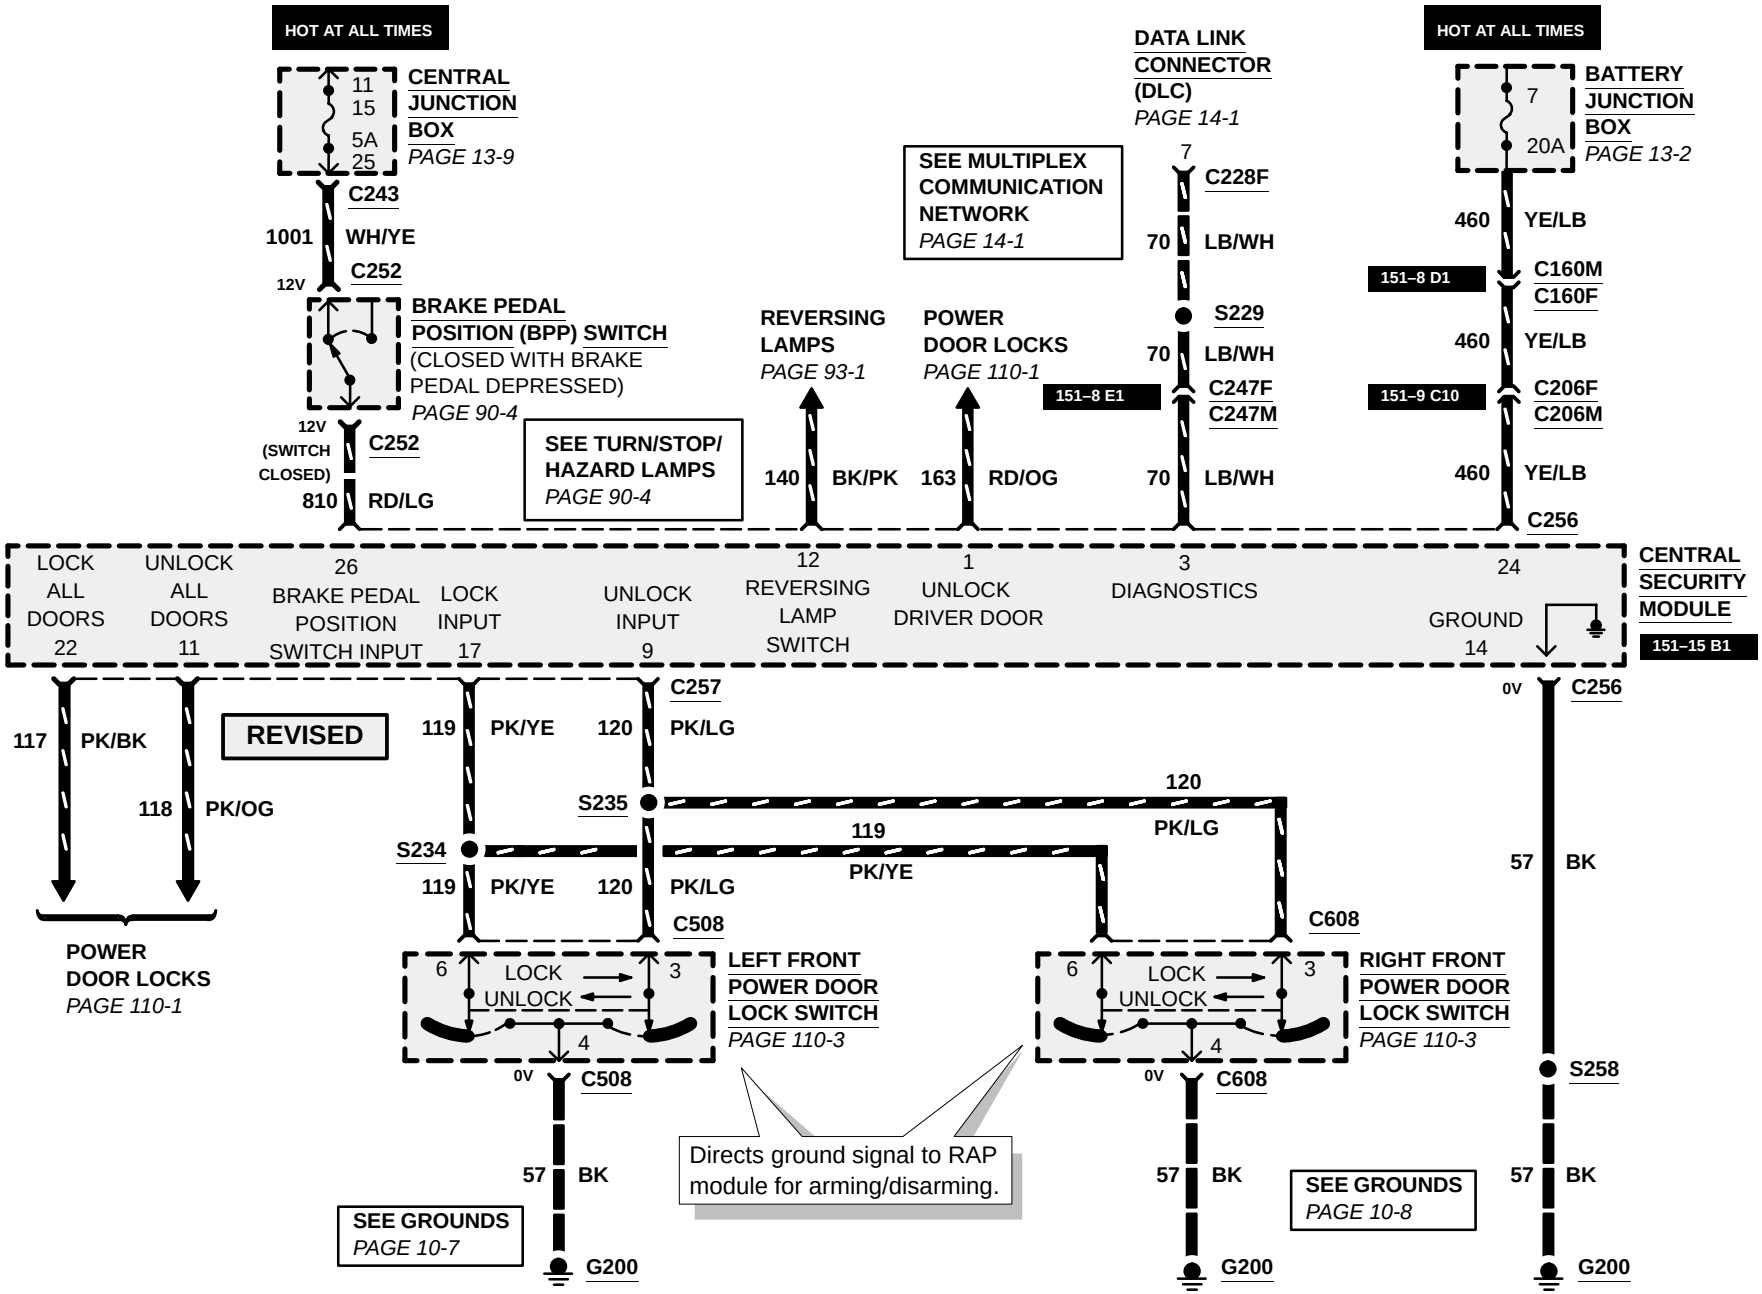
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-9
11
15
5A
25
C243
1001 WH/YE
C252
12V
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
PAGE 90-4
12V (SWITCH CLOSED)
C252
810 RD/LG
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-4
REVERSING LAMPS
PAGE 93-1
POWER DOOR LOCKS
PAGE 110-1
DATA LINK CONNECTOR (DLC)
PAGE 14-1
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
7
C228F
70 LB/WH
S229
70 LB/WH
151–8 E1
C247F
C247M
140 BK/PK
163 RD/OG
70 LB/WH
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
7
20A
460 YE/LB
151–8 D1
C160M
C160F
460 YE/LB
151–9 C10
C206F
C206M
460 YE/LB
C256
LOCK ALL DOORS 22
UNLOCK ALL DOORS 11
26 BRAKE PEDAL POSITION SWITCH INPUT
LOCK INPUT 17
UNLOCK INPUT 9
12 REVERSING LAMP SWITCH
1 UNLOCK DRIVER DOOR
3 DIAGNOSTICS
24
GROUND 14
CENTRAL SECURITY MODULE
151–15 B1
117 PK/BK
118 PK/OG
POWER DOOR LOCKS
PAGE 110-1
REVISED
119 PK/YE
120 PK/LG
C257
S235
S234
119 PK/YE
120 PK/LG
C508
120 PK/LG
119 PK/YE
C608
0V
C256
57 BK
S258
57 BK
G200
6
LOCK
UNLOCK
3
4
LEFT FRONT POWER DOOR LOCK SWITCH
PAGE 110-3
0V
C508
57 BK
G200
SEE GROUNDS
PAGE 10-7
Directs ground signal to RAP module for arming/disarming.
6
LOCK
UNLOCK
3
4
RIGHT FRONT POWER DOOR LOCK SWITCH
PAGE 110-3
0V
C608
57 BK
G200
SEE GROUNDS
PAGE 10-8