C899 (BK)

14335

E18
Interior lamp, front

F01005

Pin	Circuit	Circuit Function
1	29-LC7 (OG/BU)	Voltage supplied at all times (overload protected)
	29-LC7 (OG/BU) +	Voltage supplied at all times (overload protected)
	29-LC17 (OG/YE)	Voltage supplied at all times (overload protected)

C900 (BK)

12A522

Y134
EVAP canister purge valve

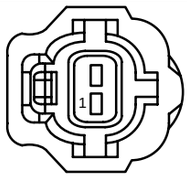

F02027

Pin	Circuit	Circuit Function
1	15-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL25 (BK/BU)	Ground, switched

C901 (BK)

9H589

B45
Knock sensor

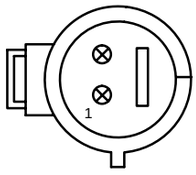

F02072

Pin	Circuit	Circuit Function
1	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
2	8-RJ18 (WH/BK)	Sensor signal

C903 (BK)

9H589

B45
Knock sensor

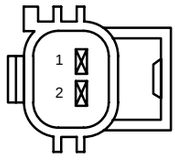

F02066

Pin	Circuit	Circuit Function
1	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
2	8-RJ18 (WH/BK)	Sensor signal

C904 (GY)

9H589

B135
Cylinder–head temperature sensor

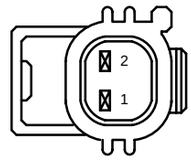

F02064

Pin	Circuit	Circuit Function
1	8-RJ33 (WH/VT)	Sensor signal
2	9-RJ33 (BN/WH)	Sensor signal return (reference/ground)

C911 (OG)

14401

R42
Cigar lighter, front



F01005

Pin	Circuit	Circuit Function
1	29S-LK15 (OG)	Voltage supplied at all times (overload protected), switched

C912 (OG)

14401

R42
Cigar lighter, front



F02009

Pin	Circuit	Circuit Function
1	31-HA6 (BK)	Ground
2	29-HA6 (OG/YE)	Voltage supplied at all times (overload protected)

C928 (GY)

12A690

B44
Turbine shaft speed (TSS) sensor

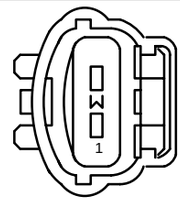

F02070

Pin	Circuit	Circuit Function
1	8-TA27 (WH/VT)	Ground
2	9-TA27 (BN/WH)	Voltage supplied at all times (overload protected)