
## C107

**14B102**

Cylinder–head temperature sensor (6G004)

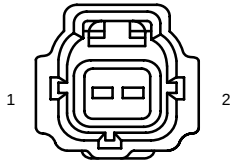



| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 225 (BK/YE) | Cylinder–head temperature sensor (6G004), signal |
| 2 | 359 (GY/RD) | signal, return |

## C109

**12B637**

Knock sensor (12A699)

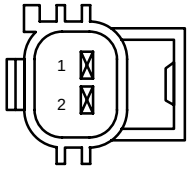



| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 311 (DG/VT) | Knock sensor (12A699) – |
| 2 | 310 (YE/RD) | Knock sensor (12A699) + |


## C110

**12A581**

Cylinder–head temperature sensor (6G004)

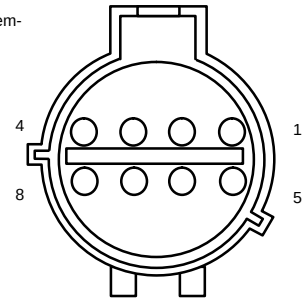


**17A477 OR 17B587**

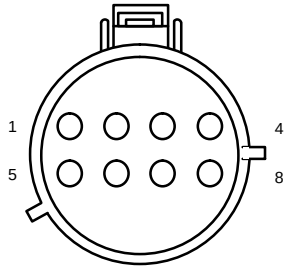


(1) 58 (WH)
(2) 941 (BK/WH)
(3) 61 (YE/RD)
(4) 28 (BK/PK)
(5)
(6)
(7) 65 (DG)
(8) 56 (DB/OG)

## C111

**12B637**

Coil On Plug (COP) 1 (12029)




| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |
| 2 | 1024 (LG/WH) | Coil On Plug (COP) 1 (12029), control |