* SUPERCREWZER

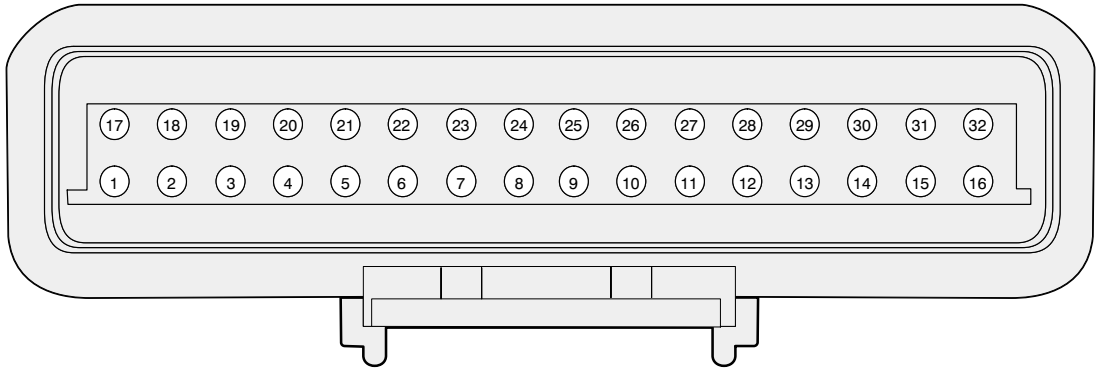

C361

ALLISON ELECTRONIC CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	136 (DB/YE)	To Vehicle Interface Module (VIM)	18	* 52 (YE)	Trailer Signal
2	114 (YE/LB)	To Vehicle Interface Module (VIM)	19	105 (RD/WH)	To Body-Builder Connector
3	* 132 (OG/BK)	Tail Lamp Bulb Outage to Message Center	20	157 (PK/LB)	To Body-Builder Connector
			21	* 52 (YE)	Trailer Signal
4	113 (YE/LB)	To Vehicle Interface Module (VIM)	22	112 (BK/YE)	To Vehicle Interface Module (VIM)
5	167 (BN/OG)	To Body-Builder Connector	23	* 52 (YE)	Trailer Signal
6	123 (RD)	To Vehicle Interface Module (VIM)	24	* 52 (YE)	Trailer Signal
7	* 52 (YE)	Trailer Signal	25	* 52 (YE)	Trailer Signal
8	* 52 (YE)	Trailer Signal	26	146 (WH/PK)	To Vehicle Interface Module (VIM)
9	* 52 (YE)	Trailer Signal	27	154 (PK/LG)	To Vehicle Interface Module (VIM)
10	* 63 (RD)	To Electronic Control Module	28	178 (DG/OG)	To Body-Builder Connector
11	155 (GY/RD)	To Body-Builder Connector		* 63 (RD)	To Electronic Control Module
	* 63 (RD)	To Electronic Control Module	29	137 (YE/BK)	To Body-Builder Connector
12	153 (PK/YE)	To Body-Builder Connector		* 63 (RD)	To Electronic Control Module
13	118 (PK/OG)	To Body-Builder Connector	30	117 (PK/BK)	To Body-Builder Connector
14	177 (WH)	To Body-Builder Connector	31	161 (DG/OG)	To Vehicle Interface Module (VIM)/Body-Builder Connector
15	* 52 (YE)	Trailer Signal			
16	136 (DB/YE)	To Vehicle Interface Module (VIM)	32	143 (LB/YE)	To Vehicle Interface Module (VIM)
17	143 (LB/YE)	To Vehicle Interface Module (VIM)			