Excursion

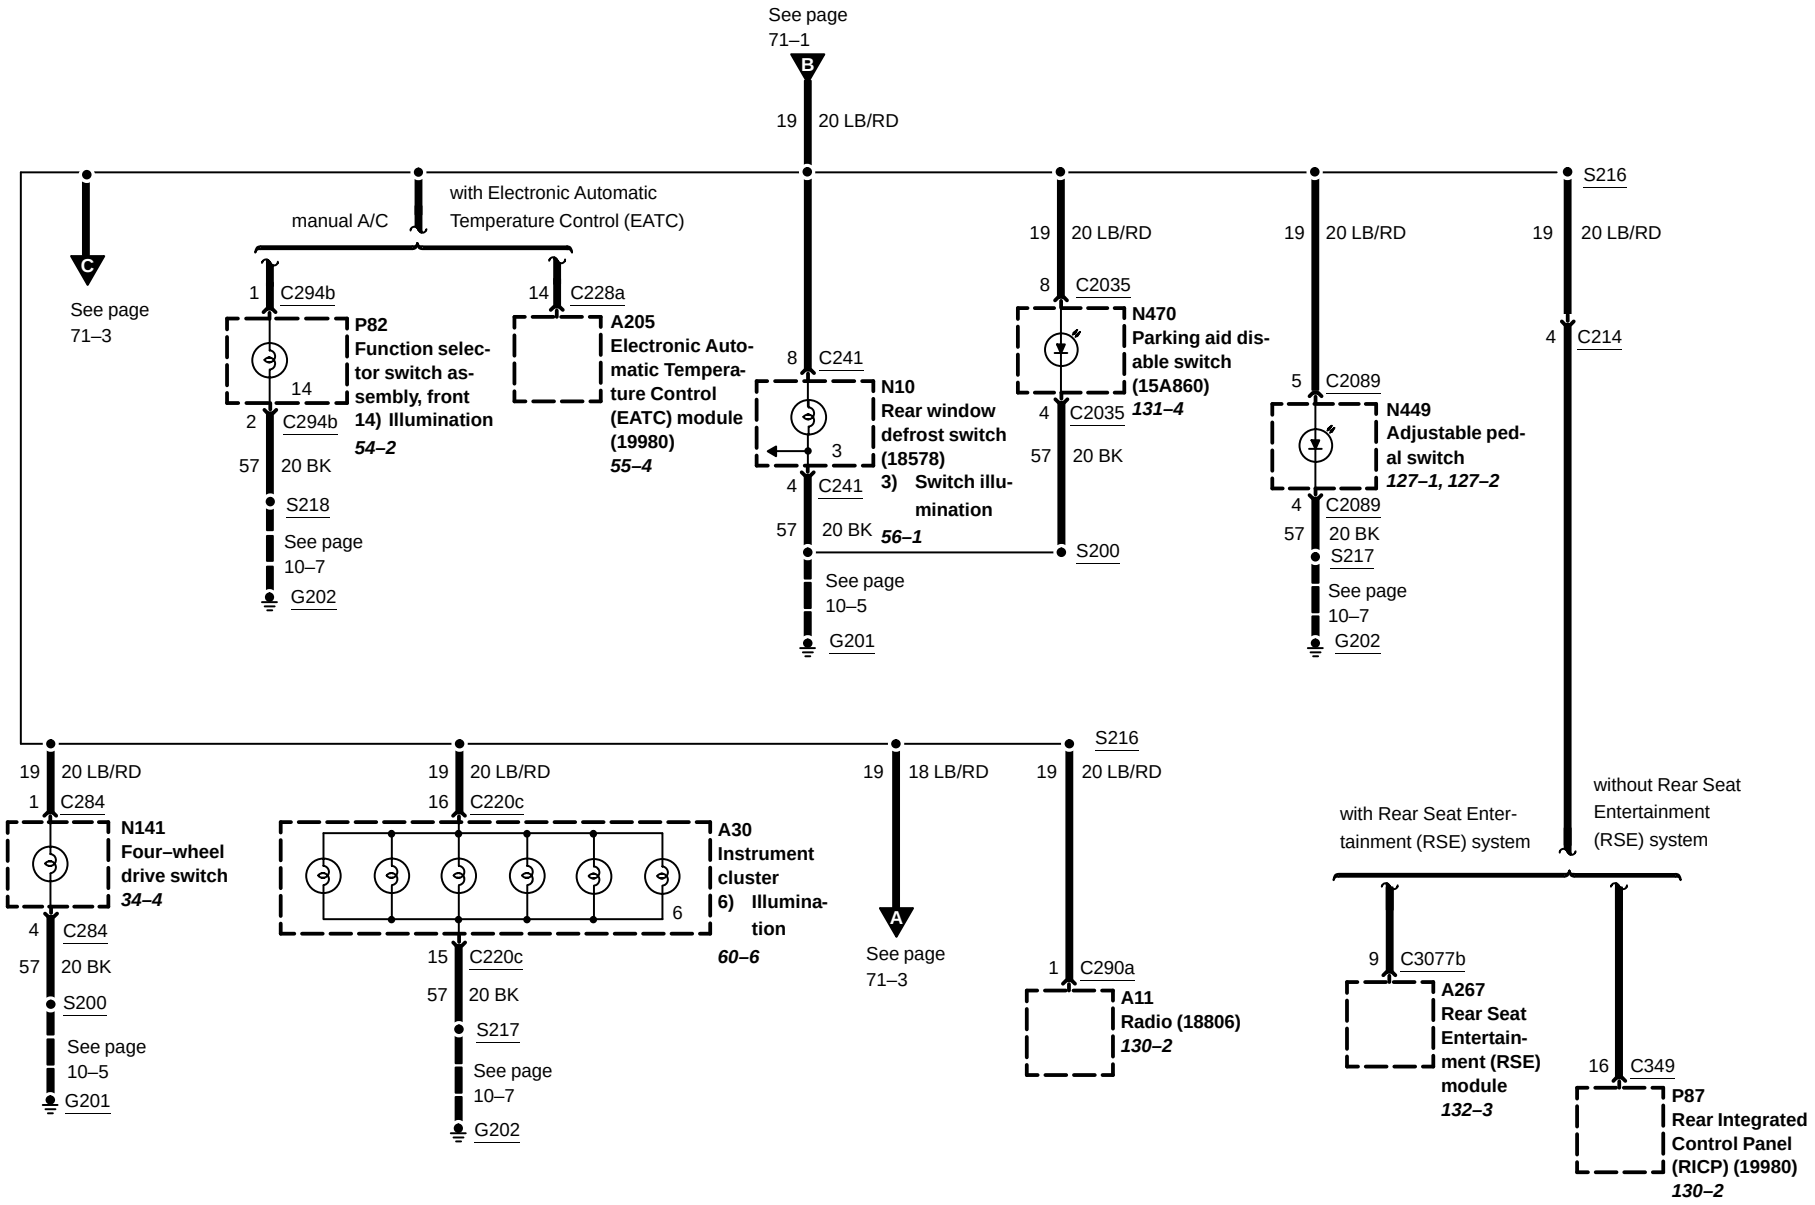
See page 71–1
B
19 20 LB/RD
C
See page 71–3
manual A/C
with Electronic Automatic Temperature Control (EATC)
1 C294b
14
2 C294b
57 20 BK
S218
See page 10–7
G202
P82 Function selector switch assembly, front 14) Illumination 54–2
14 C228a
A205 Electronic Automatic Temperature Control (EATC) module (19980) 55–4
8 C241
3
4 C241
57 20 BK
See page 10–5
G201
N10 Rear window defrost switch (18578) 3) Switch illumination 56–1
19 20 LB/RD
8 C2035
4 C2035
57 20 BK
S200
N470 Parking aid disable switch (15A860) 131–4
19 20 LB/RD
5 C2089
4 C2089
57 20 BK
S217
See page 10–7
G202
N449 Adjustable pedal switch 127–1, 127–2
S216
19 20 LB/RD
4 C214
19 20 LB/RD
1 C284
4 C284
57 20 BK
S200
See page 10–5
G201
N141 Four–wheel drive switch 34–4
19 20 LB/RD
16 C220c
15 C220c
57 20 BK
S217
See page 10–7
G202
A30 Instrument cluster 6) Illumination 60–6
19 18 LB/RD
A
See page 71–3
S216
19 20 LB/RD
1 C290a
A11 Radio (18806) 130–2
with Rear Seat Entertainment (RSE) system
without Rear Seat Entertainment (RSE) system
9 C3077b
A267 Rear Seat Entertainment (RSE) module 132–3
16 C349
P87 Rear Integrated Control Panel (RICP) (19980) 130–2