* limousine

C3159b

14A699

Occupant Classification Sensor (OCS)

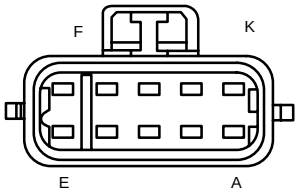

F10137

Pin	Circuit	Circuit function
A	–	not used
B	–	not used
C	–	not used
D	676 (PK/OG)	Ground
E	1557 (DB/OG)	Seat weight sensor, passenger, CAN LOW
F	1556 (DG/VT)	Seat weight sensor, passenger, CAN HIGH
G	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
	*964 (DB/LG)	
H	1569 (GY/LB)	Occupant classification sensor module, Signal Ground
J	1568 (RD/WH)	Occupant classification sensor module, Reference voltage
K	1570 (TN/BK)	Occupant classification sensor module, voltage, Out

C3160

19K315– with heated seats

18A919– with heated seats

Rear audio/climate control module



F16113

Pin	Circuit	Circuit function
1	–	not used
2	1068 (LG/BK)	Audio System ON (ASYSON)
3	833 (TN)	Audio corporate protocol B
4	484 (OG/BK)	Instrument illumination, on input
5	676 (PK/OG)	Ground
6	–	not used
7	595 (LB/RD)	Audio/climate control switch, Radio (18806), signal
8	–	not used
9	–	not used
10	832 (LB/PK)	Audio corporate protocol A
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	964 (DB/LG)	Voltage in Run or Accessory (overload protected)
16	583 (YE)	Rear audio/climate control switch