C969

14A585

N603
Power sliding door
switch, left

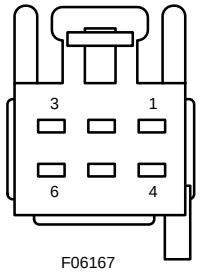

F06167

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1238 (TN/LB)	Module, power sliding door, LH side, to, Power sliding door switch, left
4	1205 (BK)	Ground
5	–	not used
6	–	not used

C992

19A170

P170
Rear radio control
delete jumper

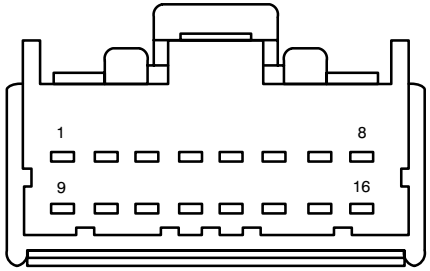

F16119

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	802 (OG/RD)	Speaker, right rear (18808) +
3	–	not used
4	–	not used
5	–	not used
6	800 (GY/LB)	Speaker, left rear (18808) +
7	800 (GY/LB)	Speaker, left rear (18808) +
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used