## C294b

### 14401

P76
Function selector switch assembly

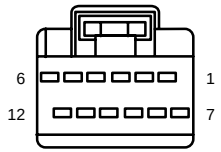

F12077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1003 (GY/YE) | Voltage supplied at all times (overload protected) |
| 2 | 1050 (LG/VT) | Voltage supplied in Start and Run (overload protected) |
| 3 | 773 (DG/OG) | Air temperature door variable resistor, wiper |
| 4 | 14 (BN) | Power, Exterior lamps |
| 5 | 59 (DG/VT) | Voltage supplied in Start and Run (overload protected) |
| 6 | 1205 (BK) | Ground |
| 7 | 269 (LB/OG) | Heater blower motor (19805) to Heater blower switch |
| | 349 (DB) | Heater blower motor (19805), to, Heater blower switch |
| 8 | 349 (DB) | Heater blower motor (19805), to, Heater blower switch |
| | 269 (LB/OG) | Heater blower motor (19805), to, Heater blower switch |
| 9 | 348 (VT) | A/C demand signal |
| 10 | 235 (RD/BK) | Instrument illumination, input |
| 11 | 1203 (BK/LB) | Ground |
| 12 | 1010 (DB/OG) | Rear window defrost switch (18578), input |
| | 688 (GY/LB) | Rear window defrost switch (18578), input |

## C300

### 14A488

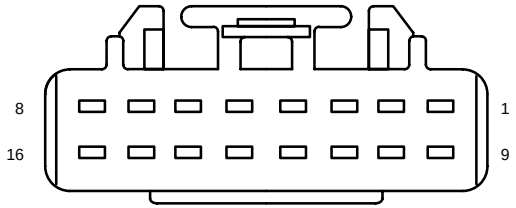

F16055

### 14C719

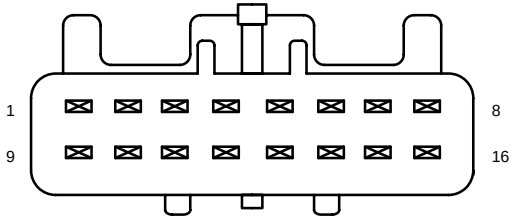

F16075

| | | | | | |
|---|---|---|---|---|---|
| (1) | | (7) | 272 (WH/OG) | (12) | 1489 (LB/BK) |
| (2) | 1493 (PK/BK) | (8) | 268 (BK/OG) | (13) | 1203 (BK/LB) |
| (3) | 70 (LB/WH) | (9) | 1491 (LB/YE) | (14) | 1000 (RD/BK) |
| (4) | 267 (BN/LG) | (10) | 1492 (LB/RD) | (15) | |
| (5) | 566 (DG) | (11) | 1490 (LB/OG) | (16) | 270 (BN/OG) |
| (6) | | | | | |

## C294c

### 14401

P76
Function selector switch assembly

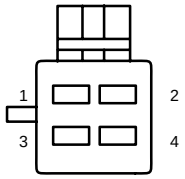

F04193

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 260 (RD/OG) | Blower motor relay, control |
| 2 | 1205 (BK) | Ground |
| 3 | 754 (LG/WH) | Blower switch speed control, to resistor |
| 4 | 752 (YE/RD) | Blower switch speed control, to resistor |

## C303a

### 14C719

A226
Passenger safety belt retractor pretensioner

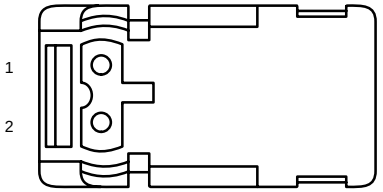

F02215

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1081 (YE/RD) | Passenger safety belt retractor pretensioner, feed |
| 2 | 1082 (YE/BK) | Passenger safety belt retractor pretensioner, return |