C352

14A699

Power seat switch, left

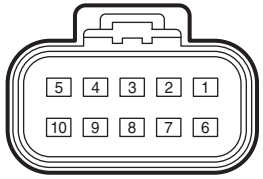

2C5T-14489-CA (F)

Pin	Circuit	Circuit Function
1	1001 (WH/YE)	Fused battery feed to module, GEM-input
2	1466 (GY/OG)	Driver memory seat regulator switch horizontal rearward
3	1465 (GY/WH)	Driver memory seat regulator switch horizontal forward
4	1205 (BK)	General ground (type 4 ground)
5	1097 (BN)	Power lumbar switch- out position
6	1464 (YE)	Driver memory seat regulator switch front down
7	1463 (RD/YE)	Driver memory seat regulator switch front up
8	1467 (GY/YE)	Driver memory seat regulator switch rear down
9	1468 (GY/LB)	Driver memory seat regulator switch rear up
10	1094 (PK)	Power lumbar switch- in position

C353a

14C719

Driver memory seat position sensor

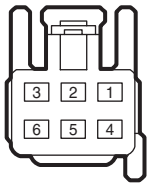

97BG-14489-YFB (F)

Pin	Circuit	Circuit Function
1	443 (LG/RD)	Module, memory seat - seat position sensor, (front sense)
2	447 (OG/RD)	Module, memory seat - seat position sensor, (sensor, -)
3	442 (LG/OG)	Module, memory seat - seat position sensor, (horiz sense)
4	—	not used
5	444 (LG/BK)	Module, memory seat - seat position sensor, (rear sense)
6	446 (OG/WH)	Module, memory seat - seat position sensor, (sensor, +)

C353b

14C719

Driver memory seat motor

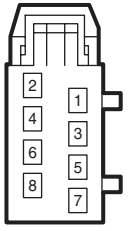

XF2T-14A464-FB (F)

Pin	Circuit	Circuit Function
1	1469 (RD/LB)	Driver memory seat motor front up
2	1473 (YE/LG)	Driver memory seat motor rear down
3	1472 (YE/WH)	Driver memory seat motor horizontal rearward
4	—	not used
5	1471 (RD/WH)	Driver memory seat motor horizontal forward
6	—	not used
7	1470 (YE/LB)	Driver memory seat motor front down
8	1474 (RD/LG)	Driver memory seat motor rear up