C508a (BU)

14631

Master window/door lock/unlock switch

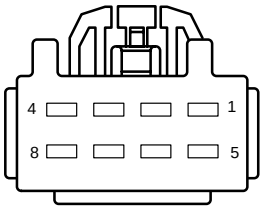

F08165

Pin	Circuit	Circuit function
1	313 (WH/YE)	Power window motor, right front +/–
2	400 (LB/BK)	Accessory relay, switched power
3	1294 (BN/YE)	Power window switch, driver, to, Front Electronic Module (FEM) (13C788), Down, input
4	1295 (RD/LG)	signal, one–touch down
5	314 (TN/LB)	Power window motor, right front +/–
6	1205 (BK)	Ground
7	1293 (BK/OG)	Power window switch, driver, to, Front Electronic Module (FEM) (13C788), Up, input
8	194 (PK)	Accessory relay, switched power

C508b (GY)

14631

Master window/door lock/unlock switch

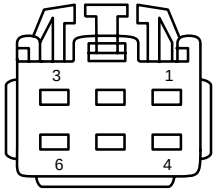

F06213

Pin	Circuit	Circuit function
1	885 (YE/LB)	Quarter window motor, LH side rear, +/–
2	1299 (LG/YE)	Driver front door lock switch, Door unlock
3	881 (BN)	Quarter window motor, RH side rear +/–
4	884 (YE/BK)	Quarter window motor, LH side rear +/–
5	1298 (LB/OG)	Driver front door lock switch, Door lock
6	882 (BN/YE)	Quarter window motor, RH side rear +/–