Seat adjust switch, driver side front (14A701)

Schematic

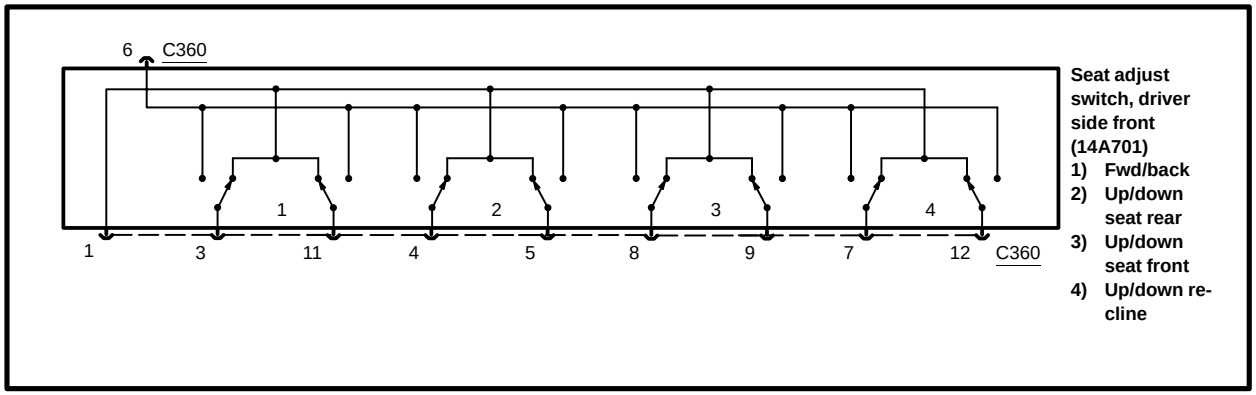

Terminals

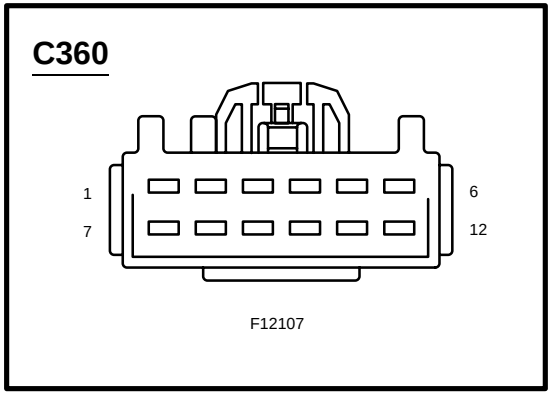

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward cir-cuit	6 and 3	Forward	Closed circuit
		Rest /Rearward	Open circuit
	6 and 11	Rest /Forward	Open circuit
		Rearward	Closed circuit
Front up/down circuit	6 and 5	Up	Closed circuit
		Rest /Down	Open circuit
	6 and 4	Rest /Up	Open circuit
		Down	Closed circuit
Rear up/down circuit	6 and 8	Up	Closed circuit
		Rest /Down	Open circuit
	6 and 9	Rest /Up	Open circuit
		Down	Closed circuit
Forward/Rearward Re-cliner Circuit	6 and 12	Rest /Forward	Open circuit
		Rearward	Closed circuit
	6 and 7	Forward	Closed circuit
		Rest /Rearward	Open circuit