C3235

14632

Sliding door contact switch, right

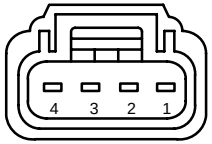

F04162

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) –
2	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
3	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
4	825 (TN/LG)	Speaker, right rear (18808) +

C3236

14A005

Sliding door contact switch, left

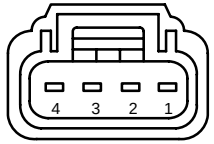

F04162

Pin	Circuit	Circuit function
1	801 (TN/YE)	Speaker, left rear (18808) –
2	1387 (VT)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Lock
3	1388 (GY)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Unlock
4	827 (TN/WH)	Speaker, left rear (18808) +

C4009 (BK)

14N139

Parking aid sensor, outer left (15K859)

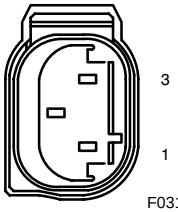

F03110

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1441 (WH/LG)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return