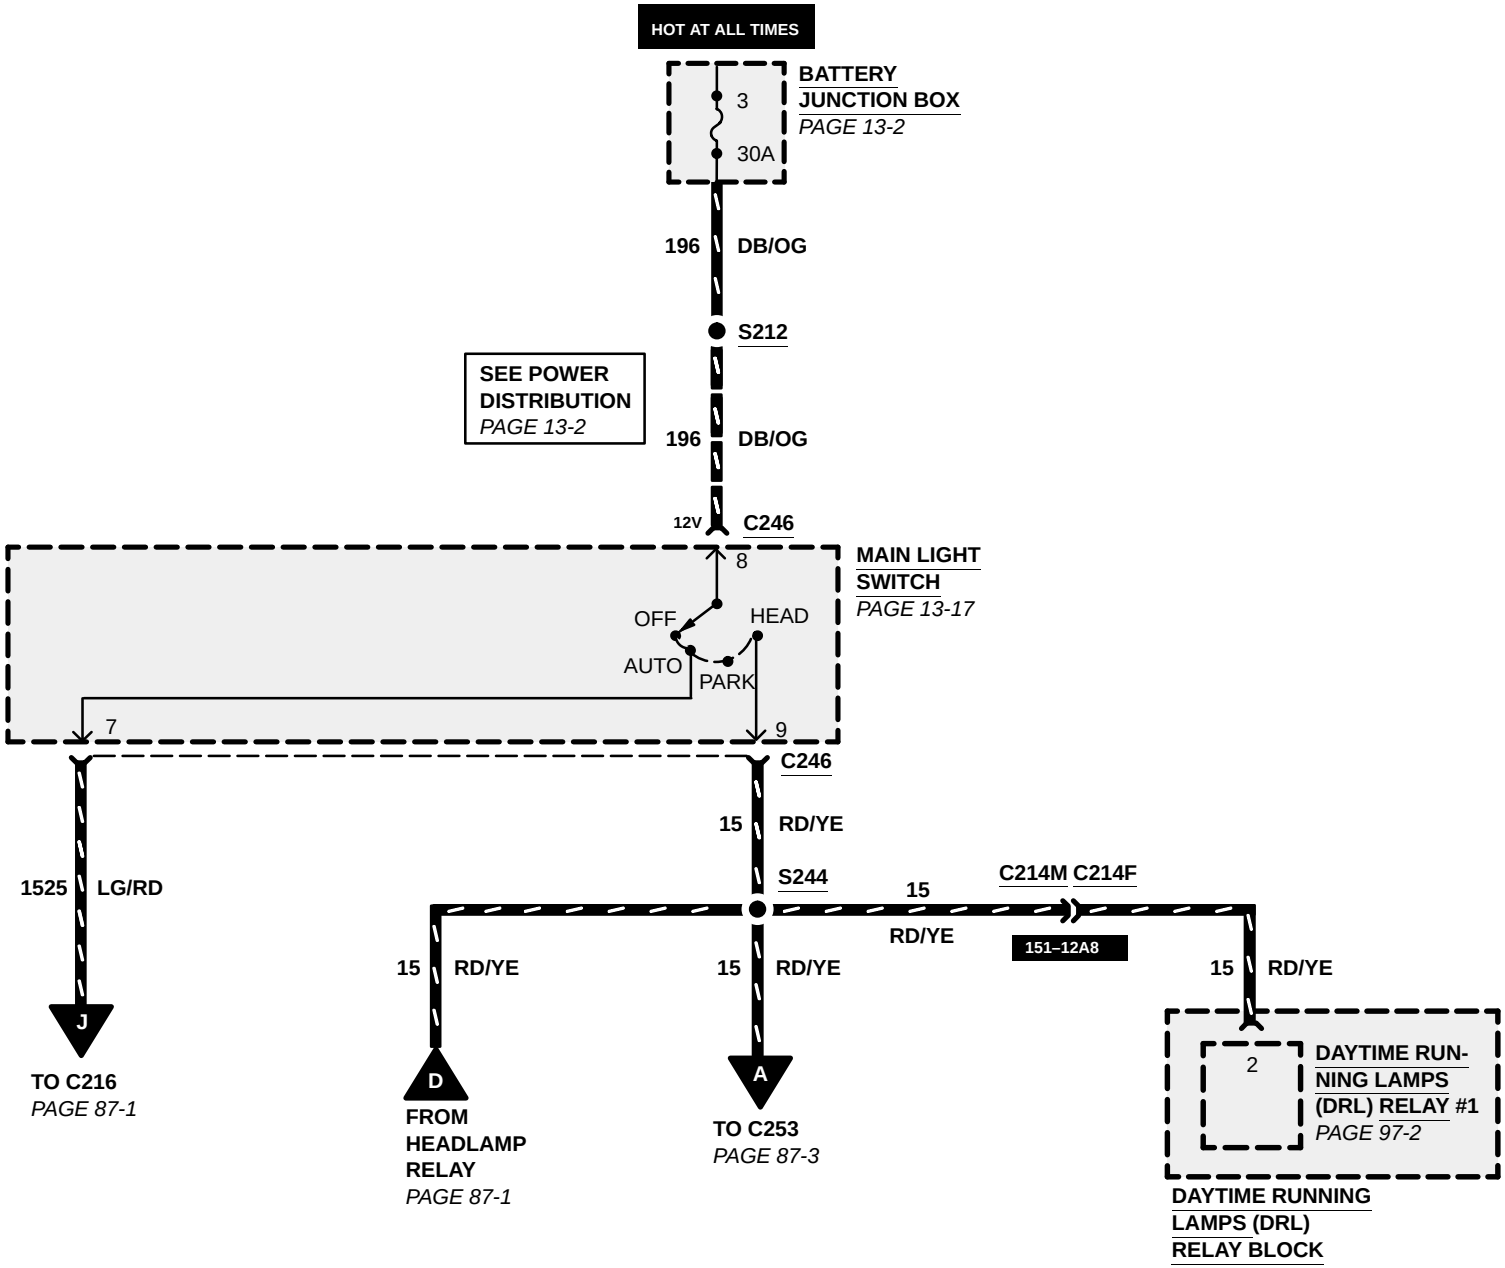
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
3
30A
196 DB/OG
S212
SEE POWER DISTRIBUTION
PAGE 13-2
196 DB/OG
12V
C246
8
MAIN LIGHT SWITCH
PAGE 13-17
OFF
HEAD
AUTO
PARK
7
9
C246
15 RD/YE
1525 LG/RD
S244
C214M C214F
15
RD/YE
151–12A8
15 RD/YE
15 RD/YE
15 RD/YE
J
TO C216
PAGE 87-1
D
FROM HEADLAMP RELAY
PAGE 87-1
A
TO C253
PAGE 87-3
2
DAYTIME RUNNING LAMPS (DRL) RELAY #1
PAGE 97-2
DAYTIME RUNNING LAMPS (DRL) RELAY BLOCK