C158

14290

M95
Air pump motor

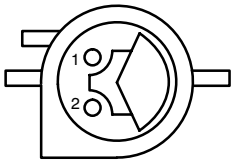

F02046

Pin	Circuit	Circuit Function
1	31-RG1 (BK/YE)	Ground
2	30S-RG1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched

C159

14290

K123
Air pump relay

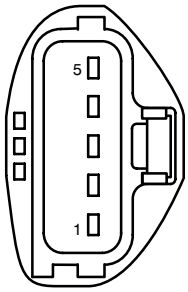

F05093

Pin	Circuit	Circuit Function
1	30-RH2 (RD/BK)	Voltage supplied at all times (not overload protected)
2	30S-RH2 (RD/BK)	Voltage supplied at all times (not overload protected), Switched
3	91S-RH2 (BN/YE)	Ground, Switched
4	31-RH1 (BK/GN)	Ground
5	15S-RH1 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C160

14290

B14
Wheel speed sensor, right front

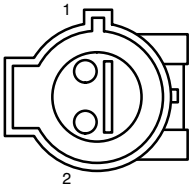

F02085

Pin	Circuit	Circuit Function
1	7-CF38 (YE/RD)	Voltage D.C. supplied at all times (sensor)
2	8-CF38 (WH/RD)	Sensor signal

C161

14290

E32
Side lamp, right front

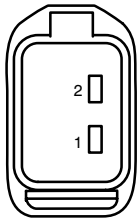

F02095

Pin	Circuit	Circuit Function
1	31S-LF17 (BK/WH)	Ground, Switched
2	29S-LF17 (OG/WH)	Voltage supplied at all times (overload protected), Switched

C162

14290

E42
Fog lamp, right front

F02037

Pin	Circuit	Circuit Function
1	30S-LD17 (RD/WH)	Voltage supplied at all times (not overload protected), Switched
2	31-LD17 (BK/WH)	Ground

C163

18C463

M202
Auxiliary coolant pump motor

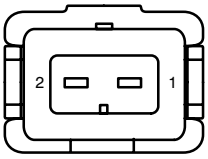

F02089

Pin	Circuit	Circuit Function
1	30S-FB1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
2	31-FB1 (BK/YE)	Ground

C164

7C078

B235
Intermediate Shaft Speed (ISS) sensor

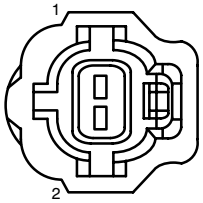

F02027

Pin	Circuit	Circuit Function
1	8-TA74 (WH/BK)	Sensor signal
2	9-TA74 (BN/YE)	Sensor signal return (reference/ ground)