C1174

12A581

A415
Injector Driver Module (IDM)

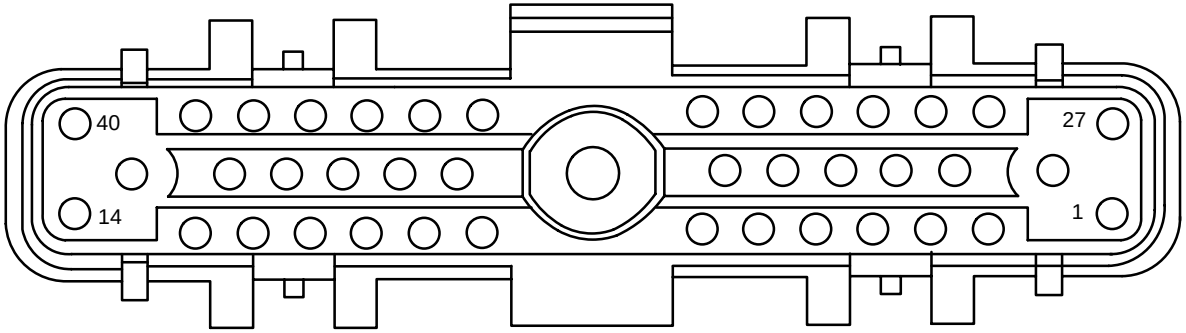

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	Signal return
3	–	not used
4	818 (GY/WH)	Powertrain Control Module (PCM) (12A650), Communication
5	–	not used
6	555 (TN)	Fuel injector 1, control
7	558 (BN/LB)	Fuel injector 4, control
8	559 (TN/BK)	Fuel injector 5, control
9	562 (LB)	Fuel injector 8, control
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	876 (DG/LG)	Power, from, Injector Driver Module (IDM) power relay
15	–	not used
16	817 (YE/LB)	cylinder identification, signal, input
17	821 (BN/OG)	fuel delivery command, signal, input
18	48	Shield
19	560 (LG/OG)	Fuel injector 6, control
20	561 (TN/RD)	Fuel injector 7, control

Pin	Circuit	Circuit function
21	557 (BN/YE)	Fuel injector 3, control
22	556 (WH)	Fuel injector 2, control
23	878 (PK/YE)	Fuel injectors, LH side, feed
24	1087 (OG)	Fuel injectors, RH side, feed
25	–	not used
26	574 (BK/PK)	Ground
27	–	not used
28	–	not used
29	–	not used
30	–	not used
31	–	not used
32	–	not used
33	–	not used
34	–	not used
35	–	not used
36	–	not used
37	–	not used
38	–	not used
39	–	not used
40	–	not used