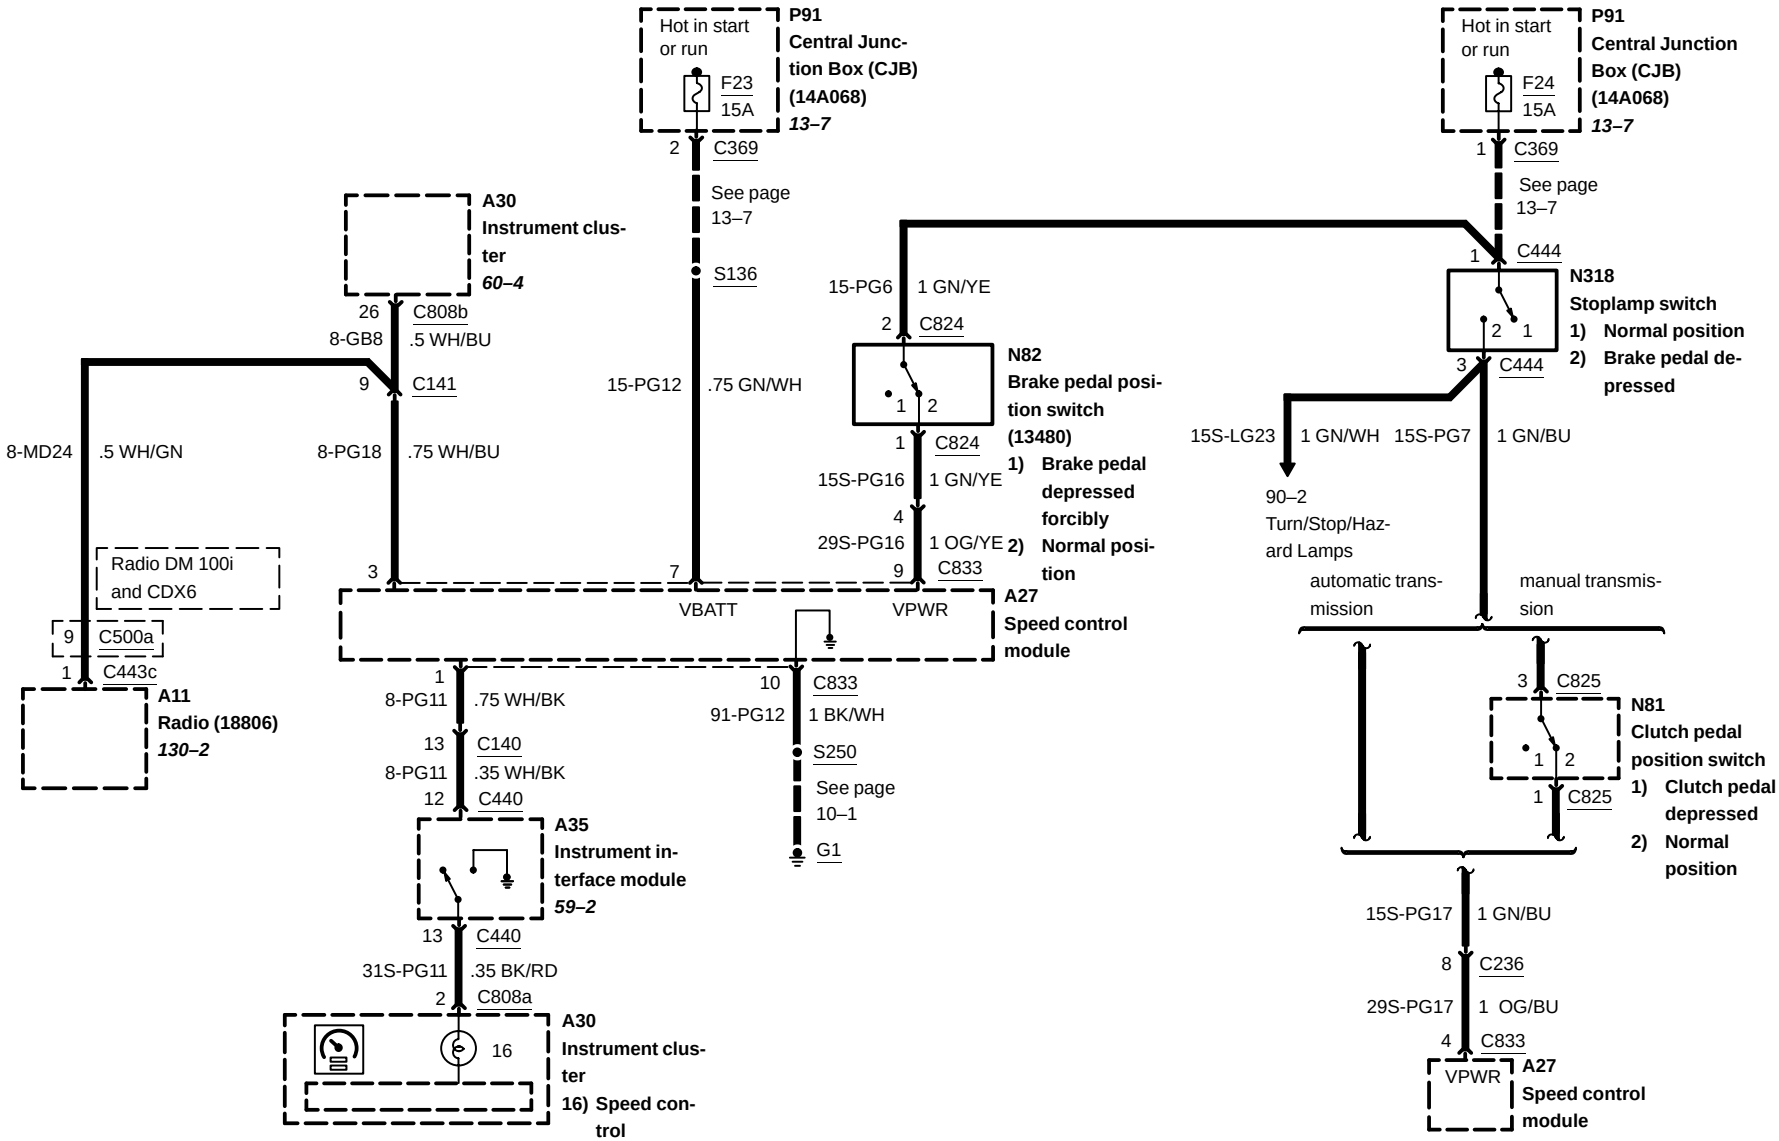
Hot in start or run
F23 15A
P91 Central Junction Box (CJB) (14A068) 13–7
2 C369
See page 13–7
A30 Instrument cluster 60–4
26 C808b
8-GB8 .5 WH/BU
S136
15-PG12 .75 GN/WH
15-PG6 1 GN/YE
2 C824
N82 Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
1 C824
15S-PG16 1 GN/YE
4
29S-PG16 1 OG/YE
9 C833
8-MD24 .5 WH/GN
9 C141
8-PG18 .75 WH/BU
Radio DM 100i and CDX6
9 C500a
1 C443c
A11 Radio (18806) 130–2
3
7
VBATT
VPWR
A27 Speed control module
1
8-PG11 .75 WH/BK
13 C140
8-PG11 .35 WH/BK
12 C440
10 C833
91-PG12 1 BK/WH
S250
See page 10–1
G1
A35 Instrument interface module 59–2
13 C440
31S-PG11 .35 BK/RD
2 C808a
16
A30 Instrument cluster
16) Speed control
Hot in start or run
F24 15A
P91 Central Junction Box (CJB) (14A068) 13–7
1 C369
See page 13–7
1 C444
N318 Stoplamp switch
1) Normal position
2) Brake pedal depressed
3 C444
15S-LG23 1 GN/WH
15S-PG7 1 GN/BU
90–2 Turn/Stop/Hazard Lamps
automatic transmission
manual transmission
3 C825
N81 Clutch pedal position switch
1) Clutch pedal depressed
2) Normal position
1 C825
15S-PG17 1 GN/BU
8 C236
29S-PG17 1 OG/BU
4 C833
VPWR
A27 Speed control module