C604 (GY)

14630

N105
Window adjust switch, passenger side

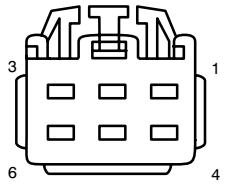

F06213

Pin	Circuit	Circuit function
1	314 (TN/LB)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	400 (LB/BK)	Window safety relay, switched power, output
	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up

C605 (GN)

14630

N205
Door lock switch, passenger side (14028)

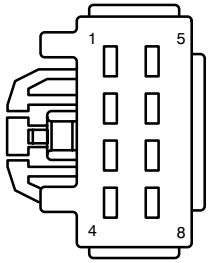

F08165

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	120 (PK/LG)	Door unlock relay, control
3	120 (PK/LG)	Door unlock relay, control
	1384 (LB)	Door unlock, output
	118 (PK/OG)	Door unlock, output
4	57 (BK)	Ground
	171 (BK/WH)	Voltage supplied at all times (overload protected)
5	705 (LG/OG)	Battery saver relay, switched power
6	–	not used
7	119 (PK/YE)	Door lock relay, control
	1383 (RD)	Door lock, output
	117 (PK/BK)	Door lock, output
8	119 (PK/YE)	Door lock relay, control

C608 (GY)

14630

M79
Power window motor, passenger side front (23394)



F02073

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down