27-19 ENGINE CONTROLS (7.3L DIESEL)

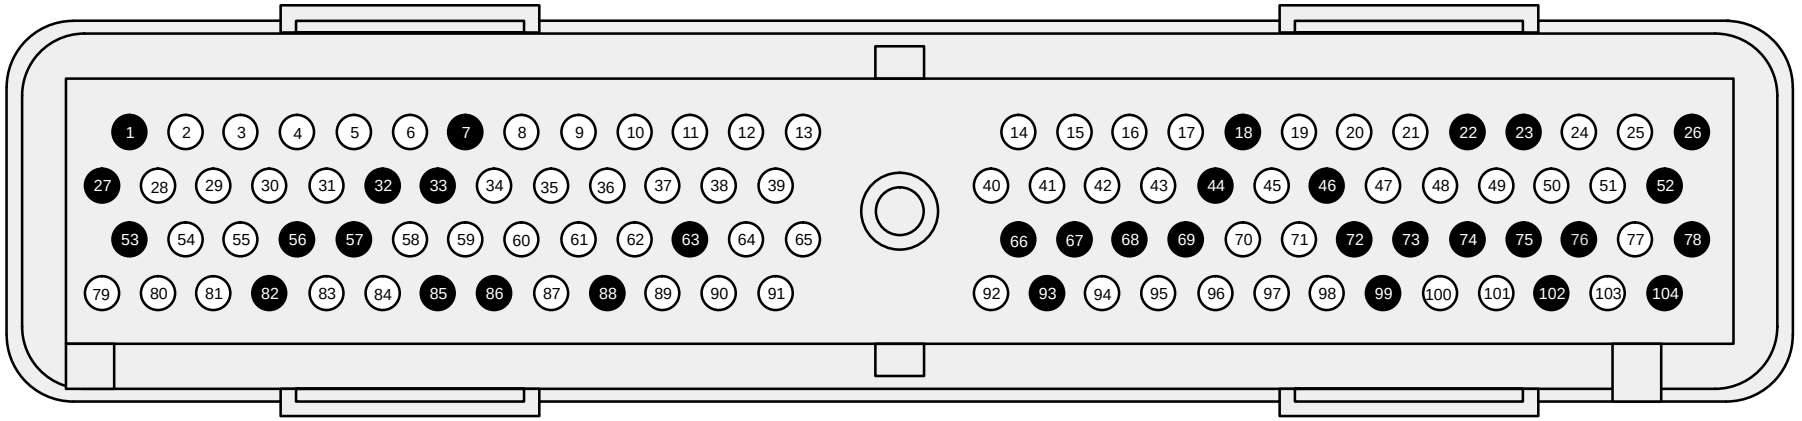

REVISED

C1027

POWERTRAIN CONTROL MODULE (PCM)

7.3L EXCURSION

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED	21	795 (DG)	Camshaft Position (CMP) Sensor
2	658 (PK/LG)	Check Engine Light	22	–	NOT USED
3	3996 (RD/YE)	Contactor Low Current Sense Return	23	–	NOT USED
4	**323 (LB/YE)	Neutral Gear Switch	24	357 (YE/WH)	Throttle Position Sensor
5	162 (LG/RD)	Brake Warning Input	25	567 (LB/YE)	Speedometer/Tachometer Diagnostic Ground
6	237 (OG/YE)	Shift Solenoid #1	26	–	NOT USED
7	–	NOT USED	27	–	NOT USED
8	1277 (WH/LG)	Glow Plug Monitor Left Bank (Low Side)	28	643 (RD)	Water in Fuel Indicator
			29	*224 (TN/WH)	Transmission Overdrive Cancel Switch
9	1278 (WH/VT)	NOT USED		**306 (TN/LB)	Clutch Switch
10	1285 (RD/LG)	Idle Validation Switch	30	553 (VT/LB)	Exhaust Back Pressure (EBP) Sensor
11	315 (VT/OG)	Shift Solenoid #2	31	307 (BK/YE)	Brake Pressure Switch
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	32	–	NOT USED
13	107 (VT)	Generic Scan Tool Input	33	–	NOT USED
14	784 (LB/BK)	4x4 Low Range Switch	34	1279 (WH)	NOT USED
15	915 (PK/LB)	Bus–	35	1183 (WH/YE)	Generator Power
16	914 (TN/OG)	Bus+	36	1280 (GY/RD)	Fuel Heater/Water in Fuel Sensor
17	1144 (WH/YE)	Digital Transmission Range (DTR) Sensor (TR1)	37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
18	–	NOT USED			
19	648 (WH/PK)	Auxiliary Tachometer Feed			
20	924 (BN/OG)	Coast Clutch Solenoid			

*** AUTOMATIC TRANSMISSION**
**** MANUAL TRANSMISSION**
***** CALIFORNIA**

7.3L EXCURSION

REVISED

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
38	354 (LG/RD)	Engine Oil Temperature (EOT) Sensor	65	796 (LB)	Camshaft Position (CMP) Sensor Ground	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
39	743 (GY)	Intake Air Temperature (IAT) Sensor	66	–	NOT USED	93	–	NOT USED
40	787 (PK/BK)	Fuel Pump Power	67	–	NOT USED	94	926 (LB/OG)	Fuel Pump Relay Enable Output
41	439 (TN/LG)	A/C Head Pressure Switch	68	–	NOT USED			
42	318 (GY/RD)	Exhaust Pressure Regulator	69	–	NOT USED	95	821 (BN/OG)	Fuel Delivery Command Signal Output
43	71 (OG/LG)	Data Output Link	70	464 (BK/PK)	Wait to Start Output			
44	–	NOT USED	71	361 (RD)	Power Input	96	817 (YE/LB)	Cylinder Identification Signal Output
45	–	NOT USED	72	–	NOT USED			
46	–	NOT USED	73	–	NOT USED	97	361 (RD)	Power Input
47	1275 (WH/RD)	Wastegate Control Solenoid	74	–	NOT USED	98	462 (VT)	Powertrain Control Module to Relay
48	818 (GY/WH)	Diesel Electronic Driver Unit	75	–	NOT USED			
49	1145 (DB/WH)	Digital Transmission Range (DTR) Sensor (TR2)	76	–	NOT USED	99	–	NOT USED
			77	570 (BK/WH)	Ground	100	29 (YE/WH)	Fuel Pump Sender
50	1143 (DG/YE)	Digital Transmission Range (DTR) Sensor (TR4)	78	–	NOT USED	101	1086 (VT/OG)	Glow plug Controller Output
			79	358 (LG/BK)	(MAP) Sensor	102	–	NOT USED
51	570 (BK/WH)	Ground	80	814 (WH/BK)	(IDM) Enable Output	103	570 (BK/WH)	Ground
52	–	NOT USED	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid	104	–	NOT USED
53	–	NOT USED						
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	82	–	NOT USED			
			83	552 (YE/RD)	Injection Pressure Regulator (IPR) Sensor			
55	729 (RD/WH)	Power (Hot at All Times)						
56	–	NOT USED	84	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor			
57	–	NOT USED						
58	679 (GY/BK)	Vehicle Speed Sensor (+)	85	–	NOT USED			
59	136 (DB/YE)	Output Shaft Speed (OSS) Sensor	86	–	NOT USED			
			87	812 (DB/LG)	Injection Control Pressure (ICP) Sensor			
60	–	NOT USED						
61	151 (LB/BK)	Speed Control ON/OFF Switch	88	–	NOT USED			
62	1291 (RD/YE)	Air Change Temperature Sensor	89	355 (GY/WH)	Accelerator Pedal Position (APP) Sensor			
63	–	NOT USED						
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)	90	351 (BN/WH)	Reference Output Voltage			
			91	359 (GY/RD)	Sensor Signal Return			