C1185

***12B637** (GY)

9D930 (BK)

Fuel injector 5
(9F593)

* 6.8L

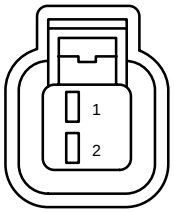

F02069

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186

***12B637** (GY)

9D930 (BK)

Fuel injector 6
(9F593)

* 6.8L

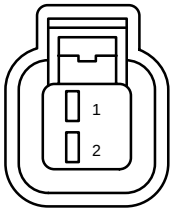

F02069

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1199

12A581

Trailer tow relay,
parking lamp

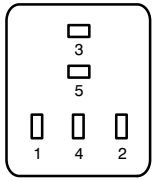

F05139

Pin	Circuit	Circuit function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground
3	962 (BN/WH)	Trailer tow relay, switched output
4	–	not used
5	37 (YE)	Voltage supplied at all times (overload protected)

C1200

12A581

Trailer tow relay,
battery charge

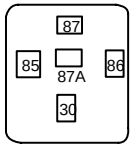

F05105

Pin	Circuit	Circuit function
30	37 (YE)	Voltage supplied at all times (overload protected)
85	296 (WH/VT)	Voltage in Run (overload protected)
86	57 (BK)	Ground
87	49 (OG)	Trailer tow relay, battery charge, switched output
87A	–	not used

C1204 (GY)

12B637

Fuel injector 9
(9F593)

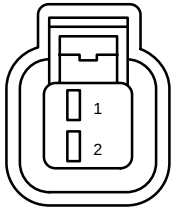

F02069

Pin	Circuit	Circuit function
1	1100 (GY/BK)	Fuel injector 9 (9F593), control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1205 (GY)

12B637

Fuel injector 10
(9F593)

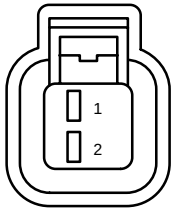

F02069

Pin	Circuit	Circuit function
1	1101 (GY/RD)	Fuel injector 10 (9F593), control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)