C505

14A005

N204
Door lock switch,
driver side (14028)

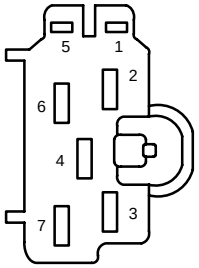

F07044

Pin	Circuit	Circuit function
1	–	not used
2	119 (PK/YE)	Door lock relay, control
3	–	not used
4	797 (LG/VT)	Voltage supplied at all times (overload protected)
5	–	not used
6	120 (PK/LG)	Door unlock relay, control
7	–	not used

C506

14631

E177
Door entry lamp, left
front (13776)

F02071

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground

C510

14A005

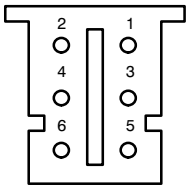

F06089

(1) 57 (BK)
(2) 84 (VT/YE)
(3) 53 (BK/LB)

14631

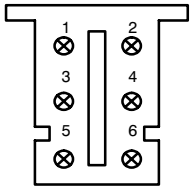

F06138

(4) 482 (WH/PK)
(5) 26 (WH/VT)
(6) 797 (LG/VT)

C512

14631

N496
Fuel door release
switch



F02071

Pin	Circuit	Circuit function
1	84 (VT/YE)	Voltage supplied at all times (overload protected)
2	482 (WH/PK)	Fuel door release solenoid, control