C294a

14401

P76
Function selector
switch assembly

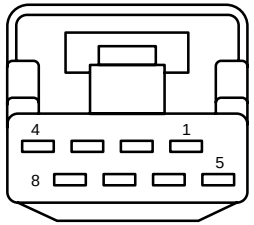

F08181

Pin	Circuit	Circuit function
1	399 (BN/YE)	Blower motor relay, control
2	41 (BK/LB)	Voltage supplied in Start and Run (overload protected)
3	–	not used
4	348 (VT)	A/C demand signal
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C294b

14401

P76
Function selector
switch assembly

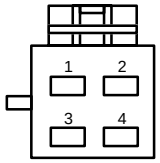

F04247

Pin	Circuit	Circuit function
1	261 (OG/BK)	Blower motor, to switch – High
2	57 (BK)	Ground
3	752 (YE/RD)	Blower switch speed control, to resistor
4	754 (LG/WH)	Blower switch speed control, to resistor

C294c

14401

P76
Function selector
switch assembly

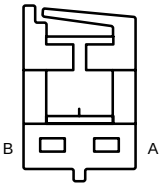

F02313

Pin	Circuit	Circuit function
A	57 (BK)	Ground
B	19 (LB/RD)	Instrument illumination, feed

C304

14405

B118
Side air bag sensor,
right (14B345)

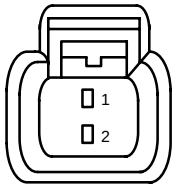

F02054

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return
2	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed

C305

14405

B119
Side air bag sensor,
left (14B345)

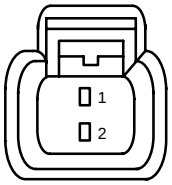

F02054

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
2	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed