C281b

7A786

A255
Four–wheel drive
control module

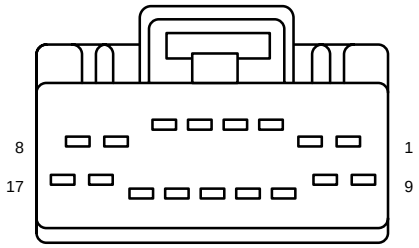

F17005

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
	3125 (RD/YE)	CAN Bus –
2	1203 (BK/LB)	Ground
3	782 (BN/WH)	Neutral tow switch
4	762 (YE/WH)	Motor position 6, Ground
	693 (OG)	UBP Diagnostics
5	–	not used
	784 (LB/BK)	Four–wheel drive, indicator
6	210 (LB)	Four–wheel drive control module to Instrument cluster
	–	not used
7	770 (WH)	Motor position 3
	939 (VT)	ABS control module (2C219) to Four–wheel drive control module
8	779 (BN)	Four–wheel drive control module to Differential lock solenoid
	972 (BK/WH)	Voltage supplied at all times (overload protected)
9	784 (LB/BK)	Four–wheel drive, Four–wheel drive control module, to ABS control module
	3126 (TN/YE)	CAN Bus +

Pin	Circuit	Circuit function
10	–	not used
	359 (GY/RD)	signal, return
11	774 (LG)	Sensor, voltage
	463 (RD/WH)	Neutral, switch sense, input
12	–	not used
13	771 (VT/YE)	Motor position 4
	511 (LG)	Brake pedal position switch (13480), input
14	464 (BK/PK)	Four–wheel drive, indicator, Low
	357 (YE/WH)	Powertrain Control Module (PCM) (12A650) to Four–wheel drive control module
15	357 (YE/WH)	Powertrain Control Module (PCM) (12A650) to Generic Electronic Module (GEM) (14B205)
	–	not used
16	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	780 (DB)	Four–wheel drive control module to Four–wheel drive switch
17	975 (BN/YE)	Four–wheel drive control module to Transfer case assembly
	994 (WH)	Voltage supplied at all times (overload protected)